 


 
 





 


 
 






Original	Replacement	Original	Replacement
 Power	 Power	 Green / Sub	 Subt
 Mute	 Mute	 Yellow	 Yellow
 1	 1	 Blue	 Blue
 2	 2	 Vol-	 Vol -
 3	 3	 Vol+	 Vol +
 4	 4	 Info	 Info
 5	 5	 Exit	 Exit
 6	 6	 EPG	 Guide
 7	 7	 Smart	 Smart
 8	 8	 File	 Media
 9	 9	 Menu	 Menu
 0	 0	 Up	 Up
 TV / Radio	 TV/R	 Left	 Left
 Last	 Back	 OK	 Ok
 Red / Audio	 Red	 Right	 Right
 Red / Audio	 Dual	 Down	 Down
 Green / Sub	 Green	 TTX	 Text





	Original	Replacement		Original	Replacement
	OPT	 Options			
	<<	 <<			
	>>	 >>			
	Play	 Play			
	Stop	 Stop			
	Rec	 Rec			
	Pause	 Pause			
	F1	 Shift + 1			
	F2	 Shift + 2	