




 















 

 


 


 





















 












 
 








 





Original		Replacement		Original		Replacement	
	Power		Power		9		9
	Sleep		Sleep / Timer		EPG		Guide / EPG / -/-
	Screen		Picture / Format		0		0
	Presets		Setup / OPT /		Swap		Fav / Marker / PC
	↔		TV/Radio /		Photo/Music/Movi		D.Menu / Top
	FAV		Shift + Fav / Marker / PC		World		Smart / List
	Lang		Audio / Lang I/II		Source		AV / Input / RDS
	Subtitle		Subtitle / EQ		Menu		Menu / Home
	TXT		Text / Goto		Up		Up
	1		1		Left		Left
	2		2		OK		OK
	3		3		Right		Right
	4		4		Down		Down
	5		5		C		Exit / Cancel / Clear
	6		6		Disp.		Display / Media
	7		7		Search Mode		Shift + Red / Netflix /
	8		8		Return		Back / Return





Original	Replacement
	 CH+ / Page+
	 Info / Angle
	 Vol+
	 CH- / Page-
	 Mute / Dimmer
	 Vol-
	 Rec / Rec Mode
	 Pause / Step / Freeze
	 I<< / Preset-
	 >>I / Preset+
	 << / Tune-
	 Play / Slow
	 Stop / Hold
	 >> / Tune+
	 Red / Netflix / Search
	 Zoom / Size
	 Green / APP / Repeat

Original	Replacement
 Yellow/Root	 Yellow / YouTube / Repeat
 Blue/Title	 Blue / Prime Video / Random

