














 

 

 




 
 

 



 
 
 


Original	Replacement
Power Tv	Shift + Power
Power	Power
Review	Setup / OPT /
Tv/VCR	TV/Radio /
Tv/VCR Tv	Shift + TV/Radio / Program
Audio	Audio / Lang I/II
Mute Tv	Shift + Mute / Dimmer
---	Smart / List
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9

Original	Replacement
X	Exit / Cancel / Clear
0	0
Timer	Sleep / Timer
Start Debut +	Green / APP / Repeat
Start Debut -	Red / Netflix / Search
Stop Fin +	Blue / Prime Video / Random
Stop Fin -	Yellow / YouTube / Repeat
Date+	Vol+
Date-	Vol-
PR+	CH+ / Page+
PR-	CH- / Page-
Prog	D.Menu / Top
Timer/?	Shift + Sleep / Timer
I/II	Display / Media
30 Sec/>>>	Back / Return
<< button"/> <<	<< / Tune-
Play	Play / Slow





	Original	Replacement	Original	Replacement
	>>	 TUNE+ >> / Tune+		
	Rec	 REC MODE Rec / Rec Mode		
	Stop	 HOLD Stop / Hold		
	Pause	 STEP-FREEZE Pause / Step / Freeze		
	Menu	 MENU Menu / Home		
	OK	 OK OK		
	Up	 Up		
	Tv PR+	 SHIFT + CH PAGE Shift + CH+ /		
	Left / <<-	 Left		
	Tv Vol-	 SHIFT + VOL- Shift + Vol-		
	Left / <<-	 PRESET- << / Preset-		
	Right / >> +	 PRESET+ >> / Preset+		
	Tv Vol+	 SHIFT + VOL+ Shift + Vol+		
	Right / >> +	 Right		
	Down	 Down		
	Tv PR-	 SHIFT + CH PAGE Shift + CH- /		

