




 

 

 

 

 



 

 



 





 

 

 



 

 

 



 










 
 

 



 




 



 


 






 




Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	i		Info
	AV		AV
	Red/Zoom		Red
	Green/(↔)		Green
	Yellow/Timer		Yellow
	Blue/Picture		Blue
	O)/I/I		Dual
	Menu		Menu
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	[≡]		Text
	Back		Back
	P+		Ch +
	P-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	^/[+]		Format
	Play/[?]		Play
	>>/[◆]		>>






 



 

 

 

 

 
 
 



 





 



 



 

 

 



 

 





 



 

 



 





 








	Original	Replacement	Original	Replacement
	√/Timer	 SETTINGS OPT		Options
	Stop/[X]			Stop
	Pause/[≡i]			Pause
	[■]	 AD SUBT		Subt
	[←■]	 SEARCH TV/R		TV/R
	[↕■]	 ECO 3D		3D
	♪	 SHIFT +  SOUND DUAL		Shift + Dual





Original	Replacement	Original	Replacement
 Power	 Power	 P-	 Ch -
 Mute	 Mute	 Vol+	 Vol +
 1	 1	 Vol-	 Vol -
 2	 2	 Red/Zoom	 Red
 3	 3	 Green/(↔)	 Green
 4	 4	 Yellow/Timer	 Yellow
 5	 5	 Blue/Picture	 Blue
 6	 6		
 7	 7		
 8	 8		
 9	 9		
 0	 0		
 AV	 AV		
 i	 Info		
 O/I/II	 Dual	 Rec/Top Menu	 Rec
 [≡]	 Text	 Play/[?]	 Play
 P+	 Ch +	 Stop/[X]	 Stop
		 Pause/[≡i]	 Pause
		 [■]	 Subt
		 [←■]	 TV/R





 




 

 





 

 







 
 


 
 







 


 
 


 





 





 


 
 



 




Original	Replacement
[↕]	3D
Musical Note	Shift + Dual
MENU	MENU
BACK	BACK
OK	OK
Up	Up
Down	Down
Right	Right
Left	Left

Original	Replacement








 

 
 

 
 






Original	Replacement	Original	Replacement
 Power	 Power	 Green/(↔)	 Green
 Mute	 Mute	 Yellow/Timer	 Yellow
 1	 1	 Blue/Picture	 Blue
 2	 2	 OK	 Ok
 3	 3	 Up	 Up
 4	 4	 Down	 Down
 5	 5	 Right	 Right
 6	 6	 Left	 Left
 7	 7	 P+	 Ch +
 8	 8	 P-	 Ch -
 9	 9	 Vol+	 Vol +
 0	 0	 Vol-	 Vol -
 i	 DISPLAY INFO	 <<	 <<
 AV	 TIMER AV	 Play/[?]	 PLAY MODE Play
 O)/I/II	 SOUND DUAL	 >>/[◆]	 >>
 MENU	 TOP MENU MENU	 Stop/[X]	 Stop
 ZOOM	 A	 Pause/[≡i]	 Pause





Original	Replacement	Original	Replacement
	^[+]		Format
	~/Timer		Options
	[■]		Subt
	[←■]		TV/R
	[↓■]		3D
	♪		Shift + Dual
	Back		Back
	[≡]		Text

