

 


 



 
 






 

 
 


 

 

 

 




 
 


Original	Replacement
 Standby DVD	 Power
 Standby	 Shift + Power
 Tv AV/Video	 TV/R
 TV Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0/AUX	 0
 Cancel	 Exit
 Memo/Mark	 Pre Ch
 Tv Vol+	 Vol +

Original	Replacement
 Tv Vol-	 Vol -
 PR+	 Ch +
 PR-	 Ch -
 ShowView/Video	 Smart
 Prog/Check	 Sleep
 SAT Timer	 Media
 Timer	 AV
 Top Menu	 Shift + Menu
 Navigation	 List
 Menu	 Menu
 Return	 Back
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 Ok
 I<<	 I<<



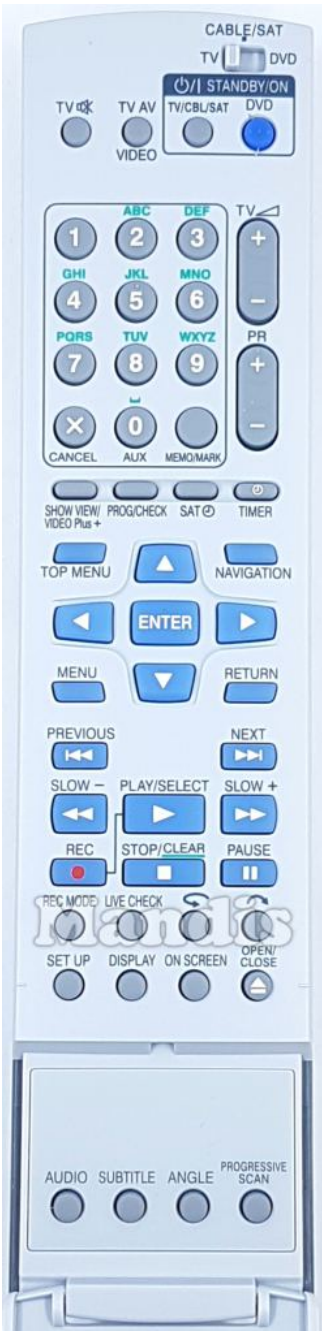

	Original	Replacement	Original	Replacement
	Standby	 Power		
	Standby DVD	 +  Shift + Power		
	1	 1		
	2	 2		
	3	 3		
	4	 4		
	5	 5		
	6	 6		
	7	 7		
	8	 8		
	9	 9		
	0	 0		
	PR+	 Ch +		
	PR-	 Ch -		
	Tv Vol+	 Vol +		
	Tv Vol-	 Vol -		
	Tv Mute	 Mute		

