



Original		Replacement		Original		Replacement	
	Power		Power		Prog-		Ch -
	Audio		Dual		Vol+		Vol +
	Tv/VCR		TV/R		Vol-		Vol -
	1		1				
	2		2				
	3		3				
	4		4				
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	0/AUX		0				
	X/0000		Exit				
	Timer		AV				
	'/'		Format				
	Prog+		Ch +				





Original	Replacement	Original	Replacement
	Power		Power
	Tv/VCR		TV/R
	Audio		Dual
	Review		Smart
	--:--		Guide
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0/AUX		0
	X/0000		Exit
	Timer		AV
	Prog		Sleep
	Timer/?		Subt
" button icon"/>	'/'		Format
	30Sec >>		3D
	Play		Play
	Stop		Stop
	<<		<<
	>>		>>
	Rec		Rec
	Pause		Pause
	OK		Ok
	Menu		Menu
	Up/Tv Prog+		Up
	Down/Tv Prog-		Down
	Right/>>I/+		Right
	Left/I<<-		Left
	Start Debut+		Red





Original		Replacement		Original		Replacement	
	Start Debut-		Green				
	Stop Fin+		Yellow				
	Stop Fin-		Blue				
	Date+		Ch +				
	Date-		Ch -				





	Original	Replacement	Original	Replacement
		Power		Power
		1		
		2		
		3		
		4		
		5		
		6		
		7		
		8		
		9		
		0		
		Prog+		Ch +
		Prog-		Ch -

