

 
 


 

 

 

 

 
 

 



 

 

 

 
























 

 





Original	Replacement
 Power	 Power
 Video	 Shift + 4
 Mute	 Mute / Dimmer
 Open / Close	 Eject / Surround
 USB	 Shift + 8
 Prog	 TV/Radio /
 Mark	 Fav / Marker / PC
 Clear	 Exit / Cancel / Clear
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9

Original	Replacement
 0	 0
 10+	 Guide / EPG / -/-
 Goto	 Text / Goto
 <<	 << / Tune-
 Vol -	 Vol-
 Vol +	 Vol+
 I<<	 I<< / Preset-
 Play / Pause	 Play / Slow
 Stop	 Stop / Hold
 >>	 >> / Tune+
 Repeat	 Green / APP / Repeat
 A-B	 Yellow / YouTube / Repeat
 >>I	 >>I / Preset+
 Menu / Ripping	 Menu / Home
 Up	 Up
 Setup	 Setup / OPT /
 Left	 Left





Original	Replacement	Original	Replacement
	Enter		OK
	Right		Right
	Title		Sound / Title
	Down		Down
	OSD		Display / Media
	Zoom		Zoom / Size
	Angle		Info / Angle
	Audio		Audio / Lang I/II
	Sub-T		Subtitle / EQ
	Step		Pause / Step / Freeze
	Slow	 + 	Shift + Play /
	Return		Back / Return
	Default		D.Menu / Top

