 

 

 
 


 
 


 
 
 

 
 
 

 
 
 

 

 
 
 

 
 
 
 
 

 

 
 
 



 
 
 
 
 
 
 
 
 
 
 
 
 
 

 


 







 


 









 
 





 
 
 
 

 
 
 




Original	Replacement	Original	Replacement
 Power	 Power	 Pr+	 Ch +
 1	 1	 Pr-	 Ch -
 2	 2	 Vol+	 Vol +
 3	 3	 Vol-	 Vol -
 4	 4	 Mute	 Mute
 5	 5	 Source	 AV
 6	 6	 Return	 Shift + Back
 7	 7	 Home	 Menu
 8	 8	 Up	 Up
 9	 9	 Down	 Down
 0	 0	 Right	 Right
 PC	 Pre Ch	 Left	 Left
 [i+]	 Info	 Enter	 Ok
 [II]	 Options	 Exit	 Exit
 [<>]	 3D	 EPG	 Guide
 Back	 Back	 Red/Rec	 Red
 Tv/DTV	 TV/R	 Green/Pause	 Green






 


 



 

 
 
 
 
 
 
 
 
 
 
 
 
 
 
 



 
 
 
 
 

 

 

 

 



 
 
 



 
 






 









Original	Replacement	Original	Replacement
 Yellow/Stop	 Yellow		
 Blue/Play	 Blue		
 [...]	 AD SUBT Subt		
 [≡?]	 ZOOM Eject		
 [≡i]	 DISC NAV LIST List		
 Text	 REPEAT TEXT Text		
 HDMI Control	 HOME SMART Smart		
 I-II	 SOUND DUAL Dual		
 [> <]	 PROG SLEEP Sleep		
 Size [<>]	 PICTURE FORMAT Format		
 1 Input 1	 SHIFT + 1 Shift + 1		
 2 Input 2	 SHIFT + 2 Shift + 2		
 3 Input 3	 SHIFT + 3 Shift + 3		
 4 Input 4	 SHIFT + 4 Shift + 4		
 INPUT 5 Input 5	 SHIFT + 5 Shift + 5		





 
 
 

 

 
 
 


 
 

 
 
 

 
 



 










 
 

 

 

 












 

 
 

 
 
 




Original	Replacement	Original	Replacement
 Power	 Power	 Down	 Down
 1	 1	 Right	 Right
 2	 2	 Left	 Left
 3	 3	 Enter	 Ok
 4	 4	 Menu	 Menu
 5	 5	 DVD Top	 D. Menu
 6	 6	 Return	 Back
 7	 7	 Play	 Play
 8	 8	 Stop	 Stop
 9	 9	 Pause	 Pause
 0	 0	 >>	 >>
 PC	 Pre Ch	 <<	 <<
 Source	 AV	 >>	 >>
 Mute	 Mute	 <<	 <<
 Vol +	 Vol +	 HDMI Control	 Smart
 Vol -	 Vol -	 Input 1	 Shift + 1
 Up	 Up	 Input 2	 Shift + 2



 

 
 
 
 
 

 
 
 

 
 
 
 
 
 
 
 
 
 








 

 








 
 
 
 
 




Original	Replacement	Original	Replacement
	Power		Power
	Source		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	PC		Pre Ch
	[i+]		Info
	Mute		Mute
	Vol +		Vol +
	Vol -		Vol -
	PR+		Ch +
	PR-		Ch -
	Menu		Menu
	Exit		Exit
	DVD Top Menu		D. Menu
	HDMI Control		Smart
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	Input 1		Shift + 1
	Input 2		Shift + 2
	Input 3		Shift + 3
	Input 4		Shift + 4
	Input 5		Shift + 5





Original	Replacement	Original	Replacement
	Power		Power
	Source		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	PC		Pre Ch
	Vol+		Vol +
	Vol-		Vol -
	PR+		Ch +
	PR-		Ch -
			Mute
			Play
			Stop
			Pause
			Rec
			>>
			<<
			HDMI Control
			Smart
			Shift + 1
			Shift + 2
			Shift + 3
			Shift + 4
			Shift + 5

