



Original	Replacement	Original	Replacement
Power Receiver	Power	Stereo	Dual
Sleep	Sleep	ALC/Standard	Subt
← Input Select	Shift + Left	Eco/ADV Surr	Smart
Input Select →	Shift + Right	Audio	TV/R
BD	Shift + 1	Home Menu	Menu
CD	Shift + 3	Return	Back
DVD	Shift + 2	Up	Up
Tuner	Shift + 4	Down	Down
iPod/USB	Shift + 5	Right	Right
SAT/CBL	Shift + 6	Left	Left
Game	Shift + 7	Enter	Ok
TV	Shift + 8	Vol+	Vol +
Signal Sel	Text	Vol-	Vol -
Acous.EQ	Red	Mute	Mute
S.Retriever	Green	>>/Tre+	>>
Phase	Yellow	<</Tre-	<<
Auto Direct	Options	>> /Bass+	>>





 

 




 



 






 









 




 

 





Original		Replacement		Original		Replacement	
	I<</Bass-		I<<				
	Disp		Info				
	4		4				
	5/SB CH		5				
	6/CH Select		6				
	7/Midnight		7				
	8/Speakers		8				
	9/Level+		9				
	Enter/Level-		Pre Ch				
	Dimmer		Media				
	Tv Control		Shift + Power				
	Input TV		AV				
	CH+ Tv		Ch +				
	CH- Tv		Ch -				
	Vol+ Tv		Shift + Vol +				
	Vol- Tv		Shift + Vol -				








 
 





Original		Replacement		Original		Replacement	
	Power Receiver		Power		6		6
	Menu Tools		Media		7		7
	Band		TV/R		8		8
	PTY/iPod Control		Smart		9		9
	Tune Up		Up		0		0
	Tune Down		Down		Disp		Info
	Preset +		Right		Dimmer		Options
	Preset-		Left				
	Enter		Ok				
	Vol+		Vol +				
	Vol-		Vol -				
	Mute		Mute				
	1		1				
	2		2				
	3		3				
	4		4				
	5		5				





Original		Replacement		Original		Replacement	
	Power Receiver		Power		Left		Left
	Vol+		Vol +		Enter		Ok
	Vol-		Vol -		Disp		Info
	Mute		Mute		CH+/Recall		Ch +
	Play		Play		CH-/X		Ch -
	Stop		Stop				
	Pause		Pause				
	>>		>>				
	<<		<<				
	>>		>>				
	<<		<<				
	Audio		TV/R				
	PTY/iPod Control		Smart				
	Return		Back				
	Up		Up				
	Down		Down				
	Right		Right				

