




 

 




 
 







 






| Original | Replacement | Original | Replacement |
|---|---|--|---|
|  Power Blue |  Shift + Power |  >> |  >> |
|  POWER Red |  Power |  Home |  Smart |
|  RED / F1 |  Red |  BACK |  Back |
|  GREEN / F2 |  Green |  UP |  Up |
|  YELLOW / F3 |  Yellow |  LEFT |  Left |
|  BLUE / F4 |  Blue |  OK |  Ok |
|  MUTE |  Mute |  RIGHT |  Right |
|  AV |  AV |  DOWN |  Down |
|  Sound Mode |  Dual |  : ≡ |  Menu |
|  SETUP |  Options |  i |  Info |
|  APP |  Media |  VOL+ |  Vol + |
|  TV |  TV/R |  PLAY/PAUSE |  Pause |
|  ≡ |  Text |  PLAY/PAUSE |  Play |
|  KB |  Guide |  CHAN.+ |  Ch + |
|  I<< |  I<< |  VOL- |  Vol - |
|  >>I |  >>I |  STOP |  Stop |
|  << |  << |  CHAN.- |  Ch - |





| Original | Replacement | Original | Replacement |
|--|--|----------|-------------|
|  1 |  1 | | |
|  2 |  2 | | |
|  3 |  3 | | |
|  4 |  4 | | |
|  5 |  5 | | |
|  6 |  6 | | |
|  7 |  7 | | |
|  8 |  8 | | |
|  9 |  9 | | |
|  Format |  Format | | |
|  0 |  0 | | |
|  Recall |  Pre Ch | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

