














 





































 


















Original	Replacement	Original	Replacement
 DVD	 Shift + 2	 0	 0
 Tuner	 Shift + 6	 Cancel	 Shift + Exit / Cancel / Clear
 Port	 Shift + 3	 I<<	 I<< / Preset-
 Aux	 Shift + 7	 Step	 Shift + Pause / Step / Freeze
 Power	 Power	 Pause	 Pause / Step / Freeze
 Open / Close	 Eject / Surround	 >>I	 >>I / Preset+
 TV / Video	 TV/Radio /	 <<	 << / Tune-
 1	 1	 Stop	 Stop / Hold
 2	 2	 Play	 Play / Slow
 3	 3	 >>	 >> / Tune+
 4	 4	 Volume +	 Vol+
 5	 5	 Mute	 Mute / Dimmer
 6	 6	 Tuning + / CH +	 CH+ / Page+
 7	 7	 Volume -	 Vol-
 8	 8	 Tuning - / CH -	 CH- / Page-
 9	 9	 Menu	 Menu / Home
 Remain	 D.Menu / Top	 Return	 Back / Return





Original	Replacement
	Up
	Left
	OK
	Right
	Down
	Audio / Lang I/II
	Subtitle / EQ
	Exit / Cancel / Clear
	Rec / Rec Mode
	Picture / Format
	Zoom / Size
	Info / Angle
	Setup / OPT /
	Sleep / Timer
	+ Shift + Mute / Dimmer
	Green / APP / Repeat
	Sound / Title

Original	Replacement
	Text / Goto





Original		Replacement	
	Power		Power
	TV / Video		AV / Input / RDS
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Vol+		Vol+
	Mute		Mute / Dimmer
	CH+		CH+ / Page+
	Vol-		Vol-
	CH-		CH- / Page-

Original		Replacement	
	Menu		Menu / Home
	Return		Back / Return
	Up		Up
	Left		Left
	Enter		OK
	Right		Right
	Down		Down

