

 







 
 

 

 











 


















 

















 




 




 



 



 




 




 

 

 

 

 



 











 




Original	Replacement
 Power	 Power
 Audio	 Dual
 [+]	 Format
 Digital	 Media
 Analog	 Smart
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 [=]	 Text
 Recall	 Pre Ch

Original	Replacement
 Mute	 Mute
 Vol+	 Vol +
 Vol-	 Vol -
 [i+]	 Info
 Menu/Home	 Menu
 Return/Exit	 Exit
 Return/Exit	 Back
 CH+	 Ch +
 CH-	 Ch -
 Tools/Options	 Options
 [:=]	 Guide





Original	Replacement	Original	Replacement
	Power		Power
	Menu		Menu
	Top Menu		D. Menu
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Clear		Exit
	Enter		Pre Ch
	F1		Smart
	F2		Media
	[: =]		Guide
	Display		Info
	Tools/Options		Options
	Return/Exit		Back
	Menu/Home		TV/R
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Mute		Mute
	Vol+		Vol +
	Vol-		Vol -
	I<<		I<<
	I>>		I>>
	Play		Play
	Pause		Pause







 

 









Original	Replacement	Original	Replacement
	Stop		Stop
	<<		<<
	>>		>>
	↑		Ch -
	↓		Ch +












Original	Replacement
 Power	 Power
 Menu	 Menu
 Top Menu	 D. Menu
 F1	 Smart
 F2	 Media
 [:≡]	 Guide
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Enter	 Pre Ch

Original	Replacement
 Clear	 Exit
 Display	 Info
 Tools/Options	 Options
 Mute	 Mute
 Vol+	 Vol +
 Vol-	 Vol -
 Return/Exit	 Back
 Menu/Home	 TV/R
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 Play	 Play
 Pause	 Pause
 Stop	 Stop
 >>	 >>



















 
 



 



 











 

 



 



 





 


 
 



 

 






	Original	Replacement	Original	Replacement
	<<		<<	
	>>		>>	
	<<		<<	
	←		CH -	
	→		CH +	





Original	Replacement	Original	Replacement
 Power	 Power	 Display	 Info
 Source	 AV	 Mute	 Mute
 1	 1	 Vol+	 Vol +
 2	 2	 Vol-	 Vol -
 3	 3	 Menu/Home	 Media
 4	 4	 Return/Exit	 Back
 5	 5	 Up	 Up
 6	 6	 OK	 Ok
 7	 7	 Down	 Down
 8	 8	 Right	 Right
 9	 9	 Left	 Left
 0	 0	 Play	 Play
 Clear	 Exit	 Stop	 Stop
 Enter	 Pre Ch	 Pause	 Pause
 Theatre	 Smart	 >>/Tuning+	 >>
 Sound Field	 Dual	 <</Tuning-	 <<
 AMP Menu	 Menu	 >>I/Preset+	 >>I





	Original	Replacement		
	I<</Preset-	 I<<		
	→	 Ch +		
	←	 Ch -		
	DMPort	 Options		
	Video 1	 Shift + 1		
	Video 2	 Shift + 2		
	BD	 Shift + 3		
	DVD	 Shift + 4		
	SAT	 Shift + 5		
	TV	 Shift + 6		
	SA-CD/CD	 Shift + 7		
	Tuner	 Shift + 8		

	Original	Replacement

