


 

 
 
 
 

 

 




 
 
 

 
 

 






 



 






 
 
 

 
 





 
 

 
 


 
 


 

 

 


 




Original	Replacement	Original	Replacement
 Power	 Power	 [=]	 Text
 Input	 AV	 Google Play	 Shift + Smart
 Tv/Radio	 TV/R	 Netflix	 Media
 Sync Menu	 Menu	 Red	 Red
 Digital/Analog	 Format	 Green	 Green
 Exit	 Exit	 Yellow	 Yellow
 1	 1	 Blue	 Blue
 2	 2	 TV	 3D
 3	 3	 Guide	 Guide
 4	 4	 Action Menu	 D. Menu
 5	 5	 Discover	 Options
 6	 6	 Back	 Back
 7	 7	 Home	 Smart
 8	 8	 Up	 Up
 9	 9	 Down	 Down
 0	 0	 Right	 Right
 [i+]/[?]	 Info	 Left	 Left





Original	Replacement	Original	Replacement
	OK		Ok
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Prog+		Ch +
	Recall		Pre Ch
	Prog-		Ch -
	Audio		Dual
	<<		<<
	Play		Play
	>>		>>
	I<<		I<<
	Pause		Pause
	>>I		>>I
	Rec		Rec
	Stop		Stop
	Title List		List
			Help
			Eject
			Subt

