











Original	Replacement
 Eject	 Eject / Surround
 Power Tv	 Shift + Power
 Power	 Power
 1	 1
 2	 2
 3	 3
 Vol+	 Vol+
 4	 4
 5	 5
 6	 6
 Vol-	 Vol-
 7	 7
 8	 8
 9	 9
 Tv/Video	 TV/Radio /
 Clear	 Exit / Cancel / Clear
 0	 0

Original	Replacement
 Enter	 AV / Input / RDS
 Picture Mode	 Picture / Format
 Audio	 Audio / Lang I/II
 Subtitle	 Subtitle / EQ
 Angle	 Info / Angle
 Sur	 Shift + Eject / Surround
 I<</Prev	 I<< / Preset-
 >>I/Next	 >>I / Preset+
 Repeat	 Green / APP / Repeat
 Time/Text	 Text / Goto
 << Scan/Slow	 << / Tune-
 Scan/Slow >>	 >> / Tune+
 Search Mode	 Red / Netflix / Search
 Replay	 Zoom / Size
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold





Original	Replacement
Up	Up
Left	Left
Enter	OK
Right	Right
Down	Down
Display	Display / Media
Return	Back / Return
Top Menu	D.Menu / Top
Menu	Menu / Home

Original	Replacement

