


Original	Replacement
Power	Power
Vol+	Vol+
Vol-	Vol-
Mute	Mute / Dimmer
Return	Back / Return
PR+	CH+ / Page+
>>	>> / Preset+
<<	<< / Preset-
PR-	CH- / Page-
Exit	Exit / Cancel / Clear
Menu	Menu / Home
Up	Up
Down	Down
Right/Zoom+	Right
Left/Zoom-	Left
OK	OK
Red	Red / Netflix / Search

Original	Replacement
Sound	Sound / Title
Green	Green / APP / Repeat
List	Shift + Smart / List
Yellow	Yellow / YouTube / Repeat
Info	Info / Angle
Mosaic	Smart / List
Blue	Blue / Prime Video / Random
Violet	Display / Media
Text	Text / Goto
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8

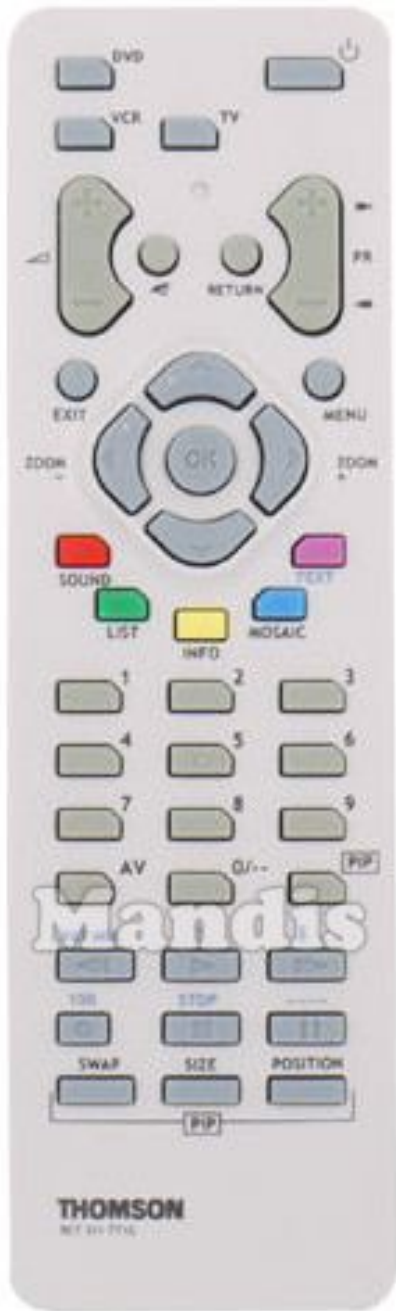




Original	Replacement
9	9
0/-/-	0
AV	AV / Input / RDS
PIP	Zoom / Size
<</Pat-Mix	<< / Tune-
Play/?	Play / Slow
>>	>> / Tune+
Rec/100	Rec / Rec Mode
Stop	Stop / Hold
Pause/----	Pause / Step / Freeze
Swap PIP	Setup / OPT /
Size PIP	Picture / Format
Position PIP	TV/Radio /

Original	Replacement




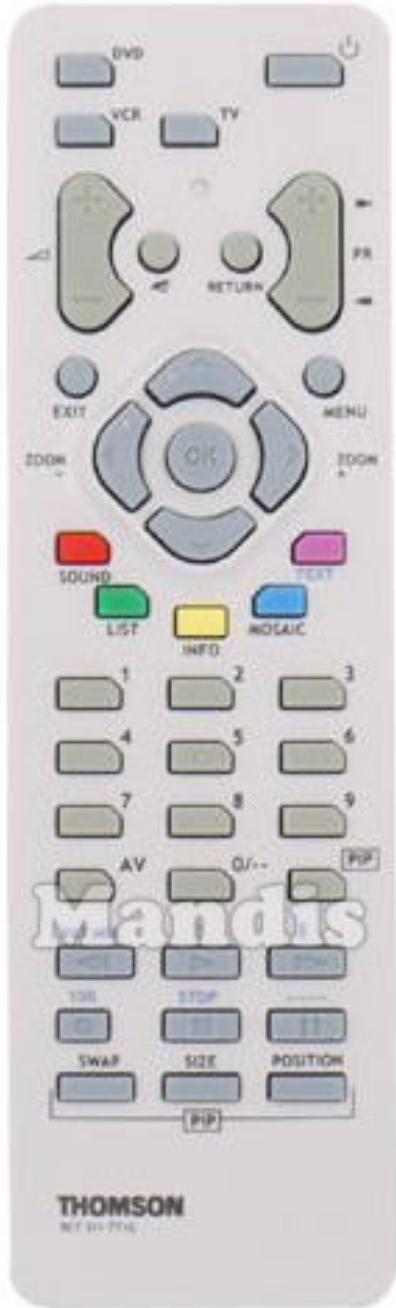

Original	Replacement
Power	Power
Vol+	Vol+
Vol-	Vol-
Mute	Mute / Dimmer
Return	Back / Return
PR+	CH+ / Page+
>>	>> / Preset+
PR-	CH- / Page-
I<<	I<< / Preset-
Exit	Exit / Cancel / Clear
Menu	Menu / Home
Up	Up
Down	Down
Right/Zoom+	Right
Left/Zoom-	Left
OK	OK
Red	Red / Netflix / Search


Original	Replacement
Sound	Sound / Title
Green	Green / APP / Repeat
List	Shift + Smart / List
Info	Info / Angle
Yellow	Yellow / YouTube / Repeat
Mosaic	Smart / List
Blue	Blue / Prime Video / Random
Violet	Display / Media
Text	Text / Goto
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8



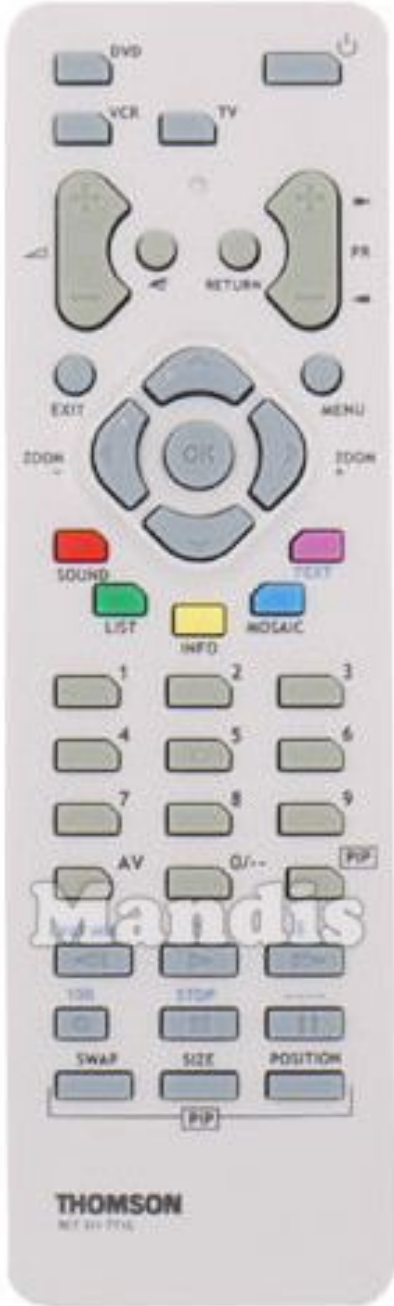




 


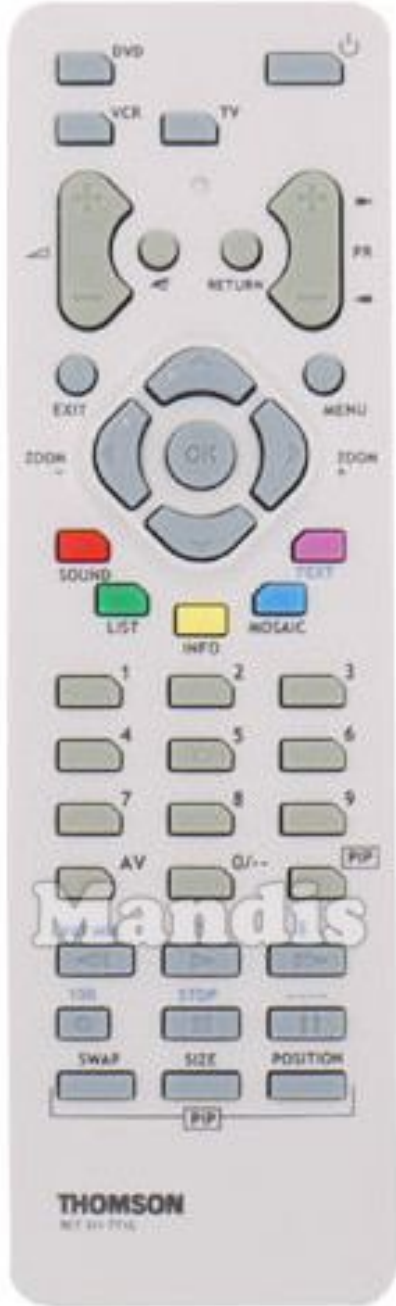


























Original	Replacement	Original	Replacement
9	9		
0/-/-	0		
AV	AV / Input / RDS		
PIP	Zoom / Size		
<</Pat-Mix	<< / Tune-		
Play/?	Play / Slow		
>>	>> / Tune+		
Rec/100	Rec / Rec Mode		
Stop	Stop / Hold		
Pause/----	Pause / Step / Freeze		
Swap PIP	Setup / OPT /		
Size PIP	Picture / Format		
Position PIP	TV/Radio /		






Original	Replacement
 Power	 Power
 Vol+	 Vol+
 Vol-	 Vol-
 Mute	 Mute / Dimmer
 Return	 Back / Return
 PR+	 CH+ / Page+
 >>	 >> / Preset+
 <<	 << / Preset-
 PR-	 CH- / Page-
 Exit	 Exit / Cancel / Clear
 Menu	 Menu / Home
 Up	 Up
 Down	 Down
 Right/Zoom+	 Right
 Left/Zoom-	 Left
 OK	 OK
 Red	 Red / Netflix / Search

Original	Replacement
 Sound	 Sound / Title
 List	 Shift + Smart / List
 Green	 Green / APP / Repeat
 Info	 Info / Angle
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Mosaic	 Smart / List
 Violet	 Display / Media
 Text	 Text / Goto
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8



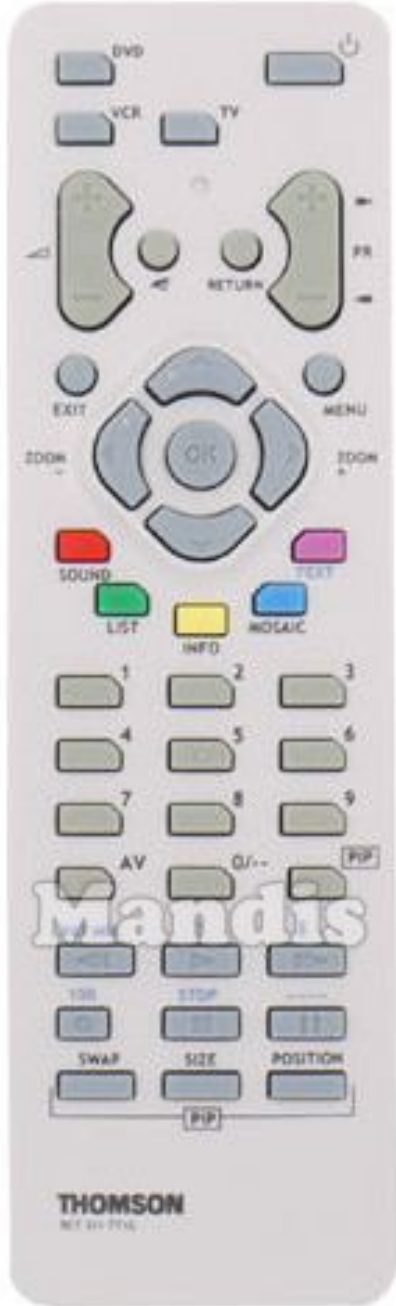

Original	Replacement
9	9
0/-/-	0
AV	AV / Input / RDS
PIP	Zoom / Size
<</Pat-Mix	<< / Tune-
Play/?	Play / Slow
>>	>> / Tune+
Rec/100	Rec / Rec Mode
Stop	Stop / Hold
Pause/----	Pause / Step / Freeze
Size PIP	Picture / Format
Position PIP	TV/Radio /

Original	Replacement

