



Original	Replacement
STANDBY/ON	Power
OPEN/CLOSE	Eject / Surround
SETUP	Setup / OPT /
MUTE	Mute / Dimmer
REPEAT	Green / APP / Repeat
A-B	Yellow / YouTube / Repeat
SHUFFLE	Blue / Prime Video / Random
SLEEP	Sleep / Timer
DISPLAY	Display / Media
TOP	Back / Return
MENU/PBC	Menu / Home
SUBTITLE	Subtitle / EQ
AUDIO	Audio / Lang I/II
ZOOM	Zoom / Size
ANGLE	Info / Angle
Up	Up
Down	Down

Original	Replacement
Left	Left
Right	Right
ENTER	OK
I> SLOW/PROG	Shift + >>I / Preset+
PLAY	Play / Slow
PAUSE	Pause / Step / Freeze
STOP	Stop / Hold
I<< PRESET	I<< / Preset-
>>I PRESET	>>I / Preset+
<< TUNNING	<< / Tune-
>> TUNNING	>> / Tune+
TIMER	Shift + Sleep / Timer
SOURCE	AV / Input / RDS
CM SKIP	Shift + Display / Media
STEP	Shift + Pause / Step /
1	1
2	2





Original	Replacement	Original	Replacement
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	SEARCH		Red / Netflix / Search
	SURROUND		Shift + Eject / Surround
	CLEAR		Exit / Cancel / Clear
	EDIT		Text / Goto
	SELECT		Shift + OK
	EQ		Shift + Subtitle / EQ
	RECORD		Rec / Rec Mode
	REC MODE		Shift + Rec / Rec Mode
	CH-		CH- / Page-

Original	Replacement	Original	Replacement
	CH+		CH+ / Page+
	VOL-		Vol-
	VOL+		Vol+

