 
 




 

 



 
 
 

 

 
 
 
 
 
 
 

 


 


 
 
 
 




Original	Replacement	Original	Replacement
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Source		AV
	ATV/DTV/Content Menu		Smart
	Vol+		Vol +
	Vol-		Vol -
	P+		Ch +
	P-		Ch -

Original	Replacement	Original	Replacement
	Mute		Mute
	Guide/Top		Media
	Exit/Return		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Menu/DVD		Menu
	Tv/FAV/Radio/Set		TV/R
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	[<>]		Format
	<[ / ]>		3D
	Subtitle		Subt



 






 


 

 

 
 
 

 

 
 
 


 

 


 
 
 

 

 

 
 
 



 



 
 






 

 

 

 
 
 

 



	Original	Replacement		Original	Replacement
	AUDIO TEXT	REPEAT TEXT			
	II/II>/[▼]	II			
	[i+]/[≡i]	DISPLAY INFO			
	O)I/II	SOUND DUAL			
	Stop	Stop			
	Play/[≡o]	PLAY MODE			
	Eject	ZOOM			
	I<</[≡?]	I<<			
	<</[≡+]	<<			
	>>/[≡♦]	>>			
	>>I/[O]/[≡X]	>>I			
	AD	SHIFT + AD SUBT			
	AUDIO TEXT	SHIFT + SOUND DUAL			









 








 
 

 



 



 

 

 
 
 





Original		Replacement		Original		Replacement	
	←[/]→		3D		Menu/DVD		Menu
	Power		Power		Tv/FAV/Radio/Set		TV/R
	1		1		Guide/Top		Guide
	2		2		[<>]		Format
	3		3		Text		Text
	4		4		Subtitle		Subt
	5		5		O) /II		Dual
	6		6		[i+]/[≡i]		Info
	7		7		OK		Ok
	8		8		Up		Up
	9		9		Down		Down
	0		0		Right		Right
	Source		AV		Left		Left
	Mute		Mute		/ >/[▼]		Pause
	Vol+		Vol +		Play/[≡o]		Play
	Vol-		Vol -		Stop		Stop
	Exit/Return		Exit		Eject		Eject


 









 








Original	Replacement	Original	Replacement
	Power		Power
	←[/]→		3D
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Source		AV
	ATV/DTV/Content Menu		Smart
	Vol+		Vol +
	Vol-		Vol -
	P+		Ch +

Original	Replacement	Original	Replacement
	P-		Ch -
	Mute		Mute
	Guide/Top		Guide
	Exit/Return		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Menu/DVD		Menu
	Tv/FAV/Radio/Set		TV/R
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Text		Text
	[<>]		Format





Original		Replacement		Original		Replacement	
	[i+]/[≡i]	 DISPLAY INFO	Info				
	/  >/[▼]		Pause				
	Subtitle	 AD SUBT	Subt				
	0)/	 SOUND DUAL	Dual				
	Play/[≡0]	 PLAY MODE	Play				
	Stop		Stop				
	Eject	 ZOOM	Eject				
	<</[≡?]		<<				
	<</[≡+]		<<				
	>>/[≡♦]		>>				
	>> /[0]/[≡X]		>>				
 AUDIO TEXT	Audio	 SHIFT +  SOUND DUAL	Shift + Dual				
 AD	AD	 SHIFT +  AD SUBT	Shift + Subt				

