 

 

 
 



 

 


 

 
 

 

 
 

 


 


Original	Replacement	Original	Replacement
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Source		AV
	ATV/DTV/Content Menu		Smart
	Vol+		Vol +
	Vol-		Vol -
	P+		Ch +
	P-		Ch -

Original	Replacement	Original	Replacement
	Mute		Mute
	Guide/Top		Media
	Exit/Return		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Menu/DVD		Menu
	Tv/FAV/Radio/Set		TV/R
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	[<>]		Format
	<[/]>		3D
	Subtitle		Subt

 






 


 

 

 
 
 

 

 
 
 


 

 


 
 
 

 

 

 
 
 



 



 
 






 

 

 

 
 
 

 





Original		Replacement		Original		Replacement	
	Text		Text				
	II/II>/[▼]		Pause				
	[i+]/[≡i]		Info				
	O)I/II		Dual				
	Stop		Stop				
	Play/[≡o]		Play				
	Eject		Eject				
	I<</[≡?]		I<<				
	<</[≡+]		<<				
	>>/[≡◇]		>>				
	>>I/[O]/[≡X]		>>I				
	AD	 + 	Shift + Subt				
	Audio	 + 	Shift + Dual				





Original		Replacement		Original		Replacement	
	←[/]→		3D		Menu/DVD		Menu
	Power		Power		Tv/FAV/Radio/Set		TV/R
	1		1		Guide/Top		Guide
	2		2		[<>]		Format
	3		3		Text		Text
	4		4		Subtitle		Subt
	5		5		O) /II		Dual
	6		6		[i+]/[≡i]		Info
	7		7		OK		Ok
	8		8		Up		Up
	9		9		Down		Down
	0		0		Right		Right
	Source		AV		Left		Left
	Mute		Mute		/II>/[▼]		Pause
	Vol+		Vol +		Play/[≡o]		Play
	Vol-		Vol -		Stop		Stop
	Exit/Return		Exit		Eject		Eject



 








 
 

 



 



 

 

 
 
 







 


 
 
 



 








Original		Replacement		Original		Replacement	
	I<</[≡?]		I<<				
	<</[≡+]		<<				
	>>/[≡◇]		>>				
	>>I/[O]/[≡X]		>>I				
	Audio	+	Shift + Dual				




 


 



Original	Replacement	Original	Replacement
	Power		Power
	←[/]→		3D
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Source		AV
	ATV/DTV/Content Menu		Smart
	Vol+		Vol +
	Vol-		Vol -
	P+		Ch +

Original	Replacement	Original	Replacement
	P-		Ch -
	Mute		Mute
	Guide/Top		Guide
	Exit/Return		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Menu/DVD		Menu
	Tv/FAV/Radio/Set		TV/R
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Text		Text
	[<>]		Format





Original	Replacement	Original	Replacement
 [i+]/[≡i]	 DISPLAY INFO Info		
 II/II>/[▼]	 II Pause		
 SUBTITLE Subtitle	 AD SUBT Subt		
 CD/1/O)II	 SOUND DUAL Dual		
 Play/[≡o]	 PLAY MODE Play		
 CD/1/ Stop	 Stop		
 SUBTITLE Eject	 ZOOM Eject		
 I<</[≡?]	 I<< I<<		
 <</[≡+]	 << <<		
 >>/[≡◇]	 >> >>		
 >>I/[O]/[≡X]	 >>I >>I		
 AUDIO Text Audio	 SHIFT + SOUND DUAL Shift + Dual		
 AD AD	 SHIFT + AD SUBT Shift + Subt		

