



Original	Replacement
 PLII PARA.	 D. Menu
 Adjust -	 Shift + Down
 DSP -	 Shift + Left
 Power	 Power
 CH/Level Up	 Ch +
 CH/Level Down	 Ch -
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 Up / PTY Select	 Up
 Down / Search M.	 Down
 Right / EON PTY	 Right
 Left / EON TA	 Left
 Enter / RDS	 Ok
 Setup / OSD	 Options
 Menu / T.Tone	 Menu
 Display / Sleep	 Info

Original	Replacement
 Display / Sleep	 Sleep
 Return /	 Back
 Stop / P.Scan	 Stop
 << / Tune -	 <<
 >> / Tune +	 >>
 I<< / Preset -	 I<<
 >>I / Preset +	 >>I
 1 / Tuner	 1
 2 / CD	 2
 3 / AUX	 3
 4 / Tape	 4
 5	 5
 6 / Video 1	 6
 7 / Video 2	 7
 8 / Video 3	 8
 9	 9
 0	 0




 

 



 






 




 


 



 








 

 


 













 



 

 







Original	Replacement
 Adjust +	 Shift + Up
 7CH Dir	 3D
 CH Sel / T/V	 TV/R
 SPK SET	 Exit
 Auto	 Subt
 DSP +	 Shift + Right
 Stereo	 Dual
 CD	 Green
 AUDIO	 Red
 AUX	 Yellow
 TV	 Blue
 VCR	 Shift + Red
 SAT	 Shift + Blue
 CABLE	 Shift + Yellow
 DVD	 Shift + Green
 AUX Power /	 Shift + Power
 AUX Rec	 Shift + Rec

Original	Replacement
 AUX Pause	 Shift + Pause
 AUX Play	 Shift + Play
 AUX Stop / P.Scan	 Shift + Stop
 AUX << / Tune	 Shift + <<
 AUX >> / Tune	 Shift + >>
 AUX >> / Preset	 Shift + >>
 AUX << / Preset -	 Shift + <<





	Original	Replacement		Original	Replacement
	AUDIO	 Red		TV 3	 3
	CD	 Green		TV 4	 4
	AUX	 Yellow		TV 5	 5
	TV	 Blue		TV 6	 6
	VCR	 Shift + Red		TV 7	 7
	DVD	 Shift + Green		TV 8	 8
	CABLE	 Shift + Yellow		TV 9	 9
	SAT	 Shift + Blue		TV 0	 0
	TV Power	 Power		CABLE Power	 Shift + Power
	TV CH/Level +	 Ch +		CABLE CH/Level +	 Shift + Ch +
	TV CH/Level -	 Ch -		CABLE CH/Level -	 Shift + Ch -
	TV CH Sel. / T/V	 Media		CABLE CH Sel.	 Shift + Smart
	TV Mute	 Mute		CABLE Mute	 Shift + Mute
	TV Volume +	 Vol +		CABLE Volume	 Shift + Vol +
	TV Volume -	 Vol -		CABLE Volume -	 Shift + Vol -
	TV 1	 1		CABLE 1	 Shift + 1
	TV 2	 2		CABLE 2	 Shift + 2






 








	Original	Replacement	
AUX  3	CABLE 3	 +  Shift + 3	
TAPE  4	CABLE 4	 +  Shift + 4	
 5	CABLE 5	 +  Shift + 5	
VIDEO1  6	CABLE 6	 +  Shift + 6	
VIDEO2  7	CABLE 7	 +  Shift + 7	
VIDEO3  8	CABLE 8	 +  Shift + 8	
 9	CABLE 9	 +  Shift + 9	
 0	CABLE 0	 +  Shift + 0	

Original	Replacement





Original	Replacement
 AUDIO	 Red
 CD	 Green
 AUX	 Yellow
 TV	 Blue
 VCR	 Shift + Red
 DVD	 Shift + Green
 SAT	 Shift + Blue
 CABLE	 Shift + Yellow
 DVD Power	 Power
 DVD Menu /	 Menu
 DVD Audio Sel.	 Dual
 DVD Subtitle	 Subt
 DVD Zoom	 3D
 DVD OSD	 Format
 DVD Up	 Up
 DVD Left	 Left
 DVD Enter	 Ok

Original	Replacement
 DVD Right	 Right
 DVD Down	 Down
 DVD Display	 Info
 DVD Pause	 Pause
 DVD Play	 Play
 DVD Stop / P.Scan	 Stop
 DVD <<	 <<
 DVD >>	 >>
 DVD I<<	 I<<
 DVD >>I	 >>I
 DVD 1	 1
 DVD 2	 2
 DVD 3	 3
 DVD 4	 4
 DVD 5	 5
 DVD 6	 6
 DVD 7	 7





	Original	Replacement		Replacement
VIDEO3	DVD 8	8	8	
	DVD 9	9	9	
	DVD 0	0	0	
POWER	SAT Power	SHIFT +	Shift + Power	
CH/LEVEL	SAT CH/Level +	SHIFT + +	Shift + Ch +	
CH/LEVEL	SAT CH/Level -	SHIFT + -	Shift + Ch -	
CH SEL	SAT CH Sel.	SHIFT +	Shift + Media	
MUTE	SAT Mute	SHIFT + MUTE	Shift + Mute	
VOLUME	SAT Volume +	SHIFT + +	Shift + Vol +	
VOLUME	SAT Volume -	SHIFT + -	Shift + Vol -	
TUNER	SAT 1	SHIFT + 1	Shift + 1	
CD	SAT 2	SHIFT + 2	Shift + 2	
AUX	SAT 3	SHIFT + 3	Shift + 3	
TAPE	SAT 4	SHIFT + 4	Shift + 4	
	SAT 5	SHIFT + 5	Shift + 5	
VIDEO1	SAT 6	SHIFT + 6	Shift + 6	
VIDEO2	SAT 7	SHIFT + 7	Shift + 7	

	Original	Replacement		Replacement
VIDEO3	SAT 8	SHIFT + 8	Shift + 8	
	SAT 9	SHIFT + 9	Shift + 9	
	SAT 0	SHIFT + 0	Shift + 0	





	Original	Replacement	
	AUDIO	 Red	
	CD	 Green	
	AUX	 Yellow	
	TV	 Blue	
	VCR	 +  Shift + Red	
	SAT	 +  Shift + Blue	
	CABLE	 +  Shift + Yellow	
	DVD	 +  Shift + Green	
	CD Pause	 Pause	
	CD Play	 Play	
	CD Stop	 Stop	
	CD I<<	 I<<	
	CD >>I	 >>I	
	CD 1	 1	
	CD 2	 2	
	CD 3	 3	
	CD 4	 4	

	Original	Replacement	
	CD 5	 5	
	CD 6	 6	
	CD 7	 7	
	CD 8	 8	
	CD 9	 9	
	CD 0	 0	
	VCR Power	 +  Shift + Power	
	VCR CH Sel.	 +  Shift + Media	
	VCR Rec	 +  Shift + Rec	
	VCR Play	 +  Shift + Play	
	VCR Mute	 +  Shift + Mute	
	VCR >>	 +  Shift + >>	
	VCR <<	 +  Shift + <<	
	VCR Volume -	 +  Shift + Vol -	
	VCR Volume +	 +  Shift + Vol +	
	VCR CH+	 +  Shift + Ch +	
	VCR CH-	 +  Shift + Ch -	





Original	Replacement
 VCR Pause	 Shift + Pause
 VCR Stop	 Shift + Stop
 VCR 1	 Shift + 1
 VCR 2	 Shift + 2
 VCR 3	 Shift + 3
 VCR 4	 Shift + 4
 VCR 5	 Shift + 5
 VCR 6	 Shift + 6
 VCR 7	 Shift + 7
 VCR 8	 Shift + 8
 VCR 9	 Shift + 9
 VCR 0	 Shift + 0

Original	Replacement

