



Original	Replacement
Standby	Power
Open / Close	Eject / Surround
Play Mode	Picture / Format
Timer	Sleep / Timer
Repeat	Green / APP / Repeat
A-B	Yellow / YouTube / Repeat
Title	Sound / Title
Display	Display / Media
Zoom	Zoom / Size
Menu	Menu / Home
Setup	Setup / OPT /
Return	Back / Return
Watch TV	Smart / List
Up	Up
Left	Left
Select	OK
Right	Right

Original	Replacement
Down	Down
Play / Pause	Play / Slow
Play / Pause	Pause / Step / Freeze
Stop	Stop / Hold
I<< Skip	I<< / Preset-
Skip >>I	>>I / Preset+
<< Search	<< / Tune-
Search >>	>> / Tune+
Program+	CH+ / Page+
Rec. Mode	Shift + Rec / Rec Mode
TV / DVD	TV/Radio /
Program-	CH- / Page-
Record	Rec / Rec Mode
Insert Chapter	D.Menu / Top
Subtitle	Subtitle / EQ
Video Source	AV / Input / RDS
Audio	Audio / Lang I/II





Original		Replacement		Original	Replacement
ANGLE	Angle	ANGLE INFO	Info / Angle		
SEARCH MODE	Search Mode	NETFLIX SEARCH	Red / Netflix / Search		
1	1	TV 1	1		
2	2	DVD 2	2		
3	3	CD - STB 3	3		
CLEAR	Clear	CLEAR EXIT CANCEL	Exit / Cancel / Clear		
4	4	VIDEO 4	4		
5	5	TAPE 5	5		
6	6	TUNER 6	6		
7	7	AUX - HDD 7	7		
8	8	USB 8	8		
9	9	BLUETOOTH 9	9		
0	0	HDMI - BAT 0	0		

