

 





 
 


 

 


 
 
 

 
 
 
 
 

 

 








Originalfernbedienung Ersatzfernbedienung



 

 


 




 
	Power		Power
	Source		SRC
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	TTX/MIX		TEXT
	PRE-CH		P/C / FAV
	Vol+		VOL +
	Vol-		VOL -
	Mute		MUTE

Originalfernbedienung Ersatzfernbedienung

	P+		CH +
	P-		CH -
	CH List		TV/R
	Content		Shift + VOD
	Menu		MENU
	Guide		-/-- / EPG
	Tools		OPT+
	Info		INFO
	Return		BACK
	Exit		EXIT
	Up		UP
	Down		DOWN
	Right		RIGHT
	Left		LEFT
	Enter		OK
	Red		Red (A)
	Green		Green (B)





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
 Yellow	 Yellow (C)		
 Blue	 Blue (D)		
 Media. P	 MEDIA		
 Internet/@TV	 VOD		
 Dual I-II	 Audio		
 AD	 WIDE		
 P.Size	 V-FOR		
 Subt.	 Subt.		
 <<	 Rewind		
 Pause	 Pause		
 >>	 Fast Forward		
 Rec	 Rec		
 Play	 Play		
 Stop	 Stop		

