

 



 

 





 

 




 

 







 


 









 

 
 





 









Originalfernbedienung Ersatzfernbedienung

|   |            |   |                       |
|---|------------|---|-----------------------|
|    | Mute       |    | Mute / Dimmer         |
|    | Power      |    | Power                 |
|    | 1          |    | 1                     |
|    | 2          |    | 2                     |
|    | 3          |    | 3                     |
|    | 4          |    | 4                     |
|    | 5          |    | 5                     |
|    | 6          |    | 6                     |
|    | 7          |    | 7                     |
|    | 8          |    | 8                     |
|    | 9          |    | 9                     |
|  | 16:9       |  | Picture / Format      |
|  | 0/FAV      |  | Fav / Marker / PC     |
|  | 0/FAV      |  | 0                     |
|  | [O]/Repeat |  | Shift + Green / APP / |
|  | Vol+       |  | Vol+                  |
|  | Input      |  | AV / Input / RDS      |

Originalfernbedienung Ersatzfernbedienung

|   |            |   |                            |
|---|------------|---|----------------------------|
|    | P+         |    | CH+ / Page+                |
|    | Vol-       |    | Vol-                       |
|    | EPG/?/A-B  |    | Shift + Yellow / YouTube / |
|    | EPG/?/A-B  |    | Guide / EPG / -/--         |
|    | P-         |    | CH- / Page-                |
|    | Up         |    | Up                         |
|    | Left       |    | Left                       |
|    | OK         |    | OK                         |
|    | Right      |    | Right                      |
|    | Down       |    | Down                       |
|    | Q/Double   |    | Shift + Red / Netflix /    |
|  | M          |  | Menu / Home                |
|  | ←          |  | Back / Return              |
|  | i          |  | Info / Angle               |
|  | Red        |  | Red / Netflix / Search     |
|  | Play/Pause |  | Play / Slow                |
|  | Green      |  | Green / APP / Repeat       |





Originalfernbedienung Ersatzfernbedienung

|  |        |  |                             |
|--|--------|--|-----------------------------|
|   | <<     |   | << / Tune-                  |
|   | Yellow |   | Yellow / YouTube / Repeat   |
|   | Stop   |   | Stop / Hold                 |
|   | Blue   |   | Blue / Prime Video / Random |
|   | >>     |   | >> / Tune+                  |
|   | I<<    |   | I<< / Preset-               |
|   | TXT    |   | Text / Goto                 |
|   | >>I    |   | >>I / Preset+               |
|   | [...]  |   | Subtitle / EQ               |
|  | Audio  |  | Audio / Lang I/II           |
|  |        |  |                             |
|  |        |  |                             |
|  |        |  |                             |
|  |        |  |                             |
|  |        |  |                             |
|  |        |  |                             |
|  |        |  |                             |
|  |        |  |                             |
|  |        |  |                             |
|  |        |  |                             |
|  |        |  |                             |

Originalfernbedienung Ersatzfernbedienung

|  |  |
|--|--|
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |

