



Originalfernbedienung Ersatzfernbedienung

 

 

 





















 

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	FAV		Fav / Marker / PC
	0		0
	TXT		Text / Goto
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random

Originalfernbedienung Ersatzfernbedienung

	CEC		Smart / List
	?		D.Menu / Top
	Exit		Exit / Cancel / Clear
	Menu		Menu / Home
	Up		Up
	Back		Back / Return
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Guide		Guide / EPG / -/-
	Tools		Setup / OPT /
	Vol+		Vol+
	Source		AV / Input / RDS
	PR+		CH+ / Page+
	Vol-		Vol-
	Mute		Mute / Dimmer





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	PR-		CH- / Page-				
	I<		I<< / Preset-				
	>I		>>I / Preset+				
	<<		<< / Tune-				
	>>		>> / Tune+				
	Rec		Rec / Rec Mode				
	Play		Play / Slow				
	Pause		Pause / Step / Freeze				
	Stop		Stop / Hold				
	[<>]		Picture / Format				
	Dialog		Audio / Lang I/II				
	[...]		Subtitle / EQ				
	Tv/Radio		TV/Radio /				
	My Media		Display / Media				

