 









 



 

 

 

 

 

 

 












**Originalfernbedienung    Ersatzfernbedienung**

	Tv		TV/Radio /
	Power		Power
	World		Smart / List
	[≡]/Text		Text / Goto
	Sleep		Sleep / Timer
	Music/Movie/Phot		Sound / Title
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Source/Games		AV / Input / RDS
	0		0

**Originalfernbedienung    Ersatzfernbedienung**

	Recall		Shift + Back / Return
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Vol+		Vol+
	Mute		Mute / Dimmer
	PR+		CH+ / Page+
	Vol-		Vol-
	i		Info / Angle
	PR-		CH- / Page-
	Menu		Menu / Home
	Up		Up
	Q.Menu		D.Menu / Top
	Left		Left
	OK		OK
	Right		Right





Originalfernbedienung    Ersatzfernbedienung

	Back		Back / Return
	Down		Down
	Exit		Exit / Cancel / Clear
	[≡]..		Setup / OPT /
	Lang		Audio / Lang I/II
	O/*		Zoom / Size
	Q./*		Picture / Format
	Play		Play / Slow
	Stop		Stop / Hold
	<<		<< / Tune-
	>>		>> / Tune+
	Pause		Pause / Step / Freeze
	Rec		Rec / Rec Mode
	Guide		Guide / EPG / -/--
	[-O-]		Display / Media

Originalfernbedienung    Ersatzfernbedienung