 





 





 


 



 



 

 


 
 

 

 

 



 



 

 

 



 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	Nicam/A2		Shift + Audio / Lang I/II
	Aspect		Shift + Picture / Format
	P.Mode		Picture / Format
	S.Mode		Sound / Title
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	-/--		Shift + Guide / EPG / -/--
	0		0

Originalfernbedienung Ersatzfernbedienung

	Recall		Back / Return
	Display		Display / Media
	Freeze		Pause / Step / Freeze
	Rec/Auto		Rec / Rec Mode
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Sleep		Sleep / Timer
	Up		Up
	Source		AV / Input / RDS
	Left		Left
	Enter		OK
	Right		Right
	Down		Down
	Menu		Menu / Home
	Exit		Exit / Cancel / Clear



