 




 

 



 
 




 
 
 

 
 







 









 



 

 
 







 
 
 


 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	OK		Ok
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Vol+		Vol +
	Vol-		Vol -
	PR+		Ch +
	PR-		Ch -
	Exit		Exit
	Back		Back
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Info		Info


 

 

 









 

 
 
 














Originalfernbedienung Ersatzfernbedienung

	Menu		Menu
	Mute		Mute
	Source		AV
	Swap		Pre Ch
	0		0
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	EPG		Guide
	Text		Text
	FAV		Shift + Pre Ch





Originalfernbedienung   Ersatzfernbedienung

	Sleep		Sleep
	Subtitle		Subt
	Lang		Dual
	Screen		Format
	Presets		Eject
	Internet		Smart
	Multimedia		Media
	Play		Play
	My Button1		List
	My Button2		D. Menu
	Rec		Rec
	Pause		Pause
	Stop		Stop
	>>		>>
	<<		<<
	>>		>>
	<<		<<

Originalfernbedienung   Ersatzfernbedienung