
 
 
 
 
 
 
 

 


 




 





 



 


 


 

 



 
 
 


 


 
 
 

 





 
Originalfernbedienung	Ersatzfernbedienung	
Power		Power
Wheel Down	 + 	Shift + Down
OK		Ok
Up		Up
Down		Down
Wheel Up	 + 	Shift + Up
Right		Right
Left		Left
Back		Back
Home / Smart		Smart
3D		3D
123 / Q.Menu	 + 	Shift + Ok
Vol +		Vol +
Vol -		Vol -
Mute		Mute
P +		Ch +
P -		Ch -

Originalfernbedienung	Ersatzfernbedienung	
Ratio		Format
List		List
Q.Menu	 + 	Shift + Menu
Subtitle		Subt
Settings	 + 	Shift + Options
AD / PIP		Dual
>>		>>
>>		>>I
Play		Play
<<		<<
<<		I<<
Rec		Rec
Pause		Pause
Stop / Live TV		Stop
AV Mode	 + 	Shift + AV
Text		Text
FAV	 + 	Shift + Pre Ch





Originalfernbedienung	Ersatzfernbedienung	
Exit		Exit
TV / PC	 + 	Shift + Smart
Input		AV
TV / Radio		TV/R
Blue		Blue
Yellow		Yellow
Green		Green
Red		Red
0		0
AD	 + 	Shift + Subt
Search	 + 	Shift + TV/R
Live Menu		Menu
Recent		Pre Ch
Live Zoom		Eject
App	 + 	Shift + Media
Guide		Guide
Info		Info

Originalfernbedienung	Ersatzfernbedienung	
T.Opt		Options
Q.View		D. Menu
Energy Saving	 + 	Shift + 3D
9		9
8		8
7		7
6		6
5		5
4		4
3		3
2		2
1		1
My APPS		Media

