









 

 



 



 
 
 

 







Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	Open/Close		Eject / Surround
	Standby Tv		Shift + Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Cancel		Shift + Exit / Cancel / Clear
	0		0
	Tv Input Sel.		AV / Input / RDS
	I<<		I<< / Preset-
	Slow		Shift + Play / Slow

Slow

Originalfernbedienung Ersatzfernbedienung

	Pause		Pause / Step / Freeze
	>>		>>  / Preset+
	<<		<< / Tune-
	Stop		Stop / Hold
	Play		Play / Slow
	>>		>> / Tune+
	Tv Vol+		Vol+
	Tv Mute		Mute / Dimmer
	Tv Prog+		CH+ / Page+
	Tv Vol-		Vol-
	Tv Prog-		CH- / Page-
	Menu		Menu / Home
	Return		Back / Return
	Up		Up
	Left		Left
	OK		OK
	Right		Right



