 
 


 







Originalfernbedienung Ersatzfernbedienung

	Power		Power
	[≡i]/Info		Info
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	[≡?]/Source		AV
	O)/II/Audio		Dual
	*		Options
	Menu		Menu

Originalfernbedienung Ersatzfernbedienung

	Exit		Exit
	♪		Shift + Dual
	Enter		Ok
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	CH+		Ch +
	CH-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	[≡♦]/[+]		Format
	List		List
	EPG		Guide
	Recall		Pre Ch
	[≡]		Text
	Play		Play



