





 







 



 

 



 

 

 



 





 
 







 


















Originalfernbedienung Ersatzfernbedienung

	Power		Power
	AV		AV / Input / RDS
	Mute		Mute / Dimmer
	16:9		Picture / Format
	Zoom		Zoom / Size
	Subt.		Subtitle / EQ
	Audio		Audio / Lang I/II
	1		1
	2		2
	3		3
	FAV		Fav / Marker / PC
	4		4
	5		5
	6		6
	EPG		Guide / EPG / -/--
	7		7
	8		8

Originalfernbedienung Ersatzfernbedienung







	9		9
	Info		Info / Angle
	Back		Back / Return
	0		0
	Exit		Exit / Cancel / Clear
	Menu		Menu / Home
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Vol-		Vol-
	Vol+		Vol+
	PR-		CH- / Page-
	PR+		CH+ / Page+
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat


















 




Originalfernbedienung Ersatzfernbedienung

Power		Power
AV		AV / Input / RDS
Mute		Mute / Dimmer
16:9		Picture / Format
Zoom		Zoom / Size
Subt.		Subtitle / EQ
Audio		Audio / Lang I/II
1		1
2		2
3		3
FAV		Fav / Marker / PC
4		4
5		5
6		6
EPG		Guide / EPG / -/--
7		7
8		8

Originalfernbedienung Ersatzfernbedienung

9		9
Info		Info / Angle
Back		Back / Return
0		0
Exit		Exit / Cancel / Clear
Menu		Menu / Home
Up		Up
Left		Left
OK		OK
Right		Right
Down		Down
Vol-		Vol-
Vol+		Vol+
PR-		CH- / Page-
PR+		CH+ / Page+
Red		Red / Netflix / Search
Green		Green / APP / Repeat



