

 
 




 
 











 







 




 
 


 
 
 
 





 



 







 









Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Recall		Pre Ch
	Audio/Nicam		Dual
	Display		Shift + Info
	Exit		Exit
	Auto		Smart








 




 




 




 

 
 
 

 

 
Originalfernbedienung Ersatzfernbedienung

	Tv Menu		Menu
	-/--		Shift + Guide
	Guide		Guide
	Source		AV
	Enter		Ok
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	CH-		Ch -
	CH+		Ch +
	Vol-		Vol -
	Vol+		Vol +
	Text		Text
	<<		<<
	>>		>>
	Hold		Options













Originalfernbedienung Ersatzfernbedienung

	Index		Info
	I<<		I<<
	Size		Format
	>>I		>>I
	Play/Pause		Play
	Stop/Subpage		Stop
	Zoom/Reveal		3D
	Sleep		Sleep
	Rec		Rec
	Media		Media
	Repeat/FAV-		Shift + Text
	FAV		Shift + Pre Ch
	FAV+		Shift + AV
	Subtitle		Subt
	Tv/Radio		TV/R
	Red		Red
	Green		Green

Originalfernbedienung Ersatzfernbedienung

	Yellow		Yellow
	Blue		Blue
	P.Mode		Shift + Format
	S.Mode		Shift + Dual

