 




 









 

 

 
 




 

 





 






 

 








 
 
 










Originalfernbedienung Ersatzfernbedienung

	Open/Close		Eject / Surround
	Standby		Power
	Info		Info / Angle
	1		1
	2		2
	3		3
	Prog/Direct		TV/Radio /
	4		4
	5		5
	6		6
	Clear		Exit / Cancel / Clear
	7		7
	8		8
	9		9
	Call		Text / Goto
	+10		Guide / EPG / -/--
	0		0

Originalfernbedienung Ersatzfernbedienung

	Search		Red / Netflix / Search
	Dimmer		Mute / Dimmer
	Input Up AMP		CH+ / Page+
	Power AMP		Shift + Power
	Mute AMP		Shift + Mute / Dimmer
	Vol+ AMP		Vol+
	Input Down		CH- / Page-
	Vol- AMP		Vol-
	Top Menu		D.Menu / Top
	Up		Up
	PopUp Menu		Smart / List
	Left		Left
	Enter		OK
	Right		Right
	Return		Back / Return
	Down		Down
	Setup		Setup / OPT /





Originalfernbedienung Ersatzfernbedienung

	Open/Close		Eject / Surround
	Standby		Power
	Info		Info / Angle
	1		1
	2		2
	3		3
	Prog/Direct		TV/Radio /
	4		4
	5		5
	6		6
	Clear		Exit / Cancel / Clear
	7		7
	8		8
	9		9
	Call		Text / Goto
	+10		Guide / EPG / -/-
	0		0

Originalfernbedienung Ersatzfernbedienung

	Search		Red / Netflix / Search
	Dimmer		Mute / Dimmer
	Input Up AMP		CH+ / Page+
	Power AMP		Shift + Power
	Mute AMP		Shift + Mute / Dimmer
	Vol+ AMP		Vol+
	Input Down		CH- / Page-
	Vol- AMP		Vol-
	Top Menu		D.Menu / Top
	Up		Up
	PopUp Menu		Smart / List
	Left		Left
	Enter		OK
	Right		Right
	Return		Back / Return
	Down		Down
	Setup		Setup / OPT /



