



**Originalfernbedienung    Ersatzfernbedienung**

	Open/Close		Eject / Surround
	Display		Display / Media
	Standby		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Title/Return		Back / Return
	0		0
	Search		Red / Netflix / Search
	Menu/Disc		Menu / Home
	Up		Up






**Originalfernbedienung    Ersatzfernbedienung**

	Setup		Setup / OPT /
	Left		Left
	OK		OK
	Right		Right
	I<<		I<< / Preset-
	Down		Down
	>>I		>>I / Preset+
	Subtitle		Subtitle / EQ
	Audio		Audio / Lang I/II
	Angle		Info / Angle
	Zoom		Zoom / Size
	Stop		Stop / Hold
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Mute		Mute / Dimmer
	Repeat		Green / APP / Repeat
	Repeat A-B		Yellow / YouTube / Repeat





Originalfernbedienung   Ersatzfernbedienung

	Slow		Fav / Marker / PC
	Step	 + 	Shift + Pause / Step /

Originalfernbedienung   Ersatzfernbedienung