



Originalfernbedienung Ersatzfernbedienung

|   |            |   |               |
|---|------------|---|---------------|
|    | Power      |    | Power         |
|    | 1          |    | 1             |
|    | 2          |    | 2             |
|    | 3          |    | 3             |
|    | 4          |    | 4             |
|    | 5          |    | 5             |
|    | 6          |    | 6             |
|    | 7          |    | 7             |
|    | 8          |    | 8             |
|    | 9          |    | 9             |
|   | 0          |   | 0             |
|  | 10+        |  +  | Shift + Guide |
|  | Mute       |    | Mute          |
|  | Title/TTX  |    | Text          |
|  | Menu       |    | Menu          |
|  | Open/Close |    | Eject         |
|  | Favorite   |    | Pre Ch        |

Originalfernbedienung Ersatzfernbedienung

|   |          |   |         |
|---|----------|---|---------|
|    | Goto     |    | Media   |
|    | EPG      |    | Guide   |
|    | Info     |    | Info    |
|    | Vol-     |    | Vol -   |
|    | Vol+     |    | Vol +   |
|    | Setup    |    | Options |
|    | Source   |    | AV      |
|    | Tv/Radio |    | TV/R    |
|    | Return   |    | Back    |
|    | Play     |    | Play    |
|   | Pause    |   | Pause   |
|  | Stop     |  | Stop    |
|  | <<       |  | <<      |
|  | >>       |  | >>      |
|  | I<<      |  | I<<     |
|  | >>I      |  | >>I     |
|  | Subtitle |  | Subt    |



