


 








 


 















Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Tv/SAT		TV/R
	Mute		Mute
	Piloto		Info
	Guia		Guide
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7

Originalfernbedienung Ersatzfernbedienung

	8		8
	9		9
	0		0
	X/Prefer		Pre Ch
	→/Salir		Exit
	Serv		Smart
	+		Media
	Perso		Menu
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	E/Text		Text

