






 

 

 
 
















 

 


 
 



 


 
 
 









 
 



 



 

 
 
 



Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------------|---|---------|
|  | Power |  | Power |
|  | [i+] |  | Info |
|  | Sleep |  | Sleep |
|  | Media Player |  | Media |
|  | Mute |  | Mute |
|  | ▼/O)I/I+II |  | Dual |
|  | Vol+ |  | Vol + |
|  | Vol- |  | Vol - |
|  | P+ |  | Ch + |
|  | P- |  | Ch - |
|  | Radio |  | TV/R |
|  | Source |  | AV |
|  | Recall |  | Pre Ch |
|  | [<>]/← |  | Format |
|  | PC |  | D. Menu |
|  | DTV |  | Smart |
|  | 1 |  | 1 |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-------|---|-------|
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | OK |  | Ok |
|  | Play |  | Play |
|  | Pause |  | Pause |
|  | Menu |  | Menu |
|  | End |  | Exit |
|  | Rec |  | Rec |
|  | Up |  | Up |
|  | >>I |  | >>I |



 





Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-------------|---|----------------|
|  | I<< |  | I<< |
|  | Down |  | Down |
|  | Right |  | Right |
|  | >> |  | >> |
|  | << |  | << |
|  | Left |  | Left |
|  | Red |  | Red |
|  | Green |  | Green |
|  | Yellow |  | Yellow |
|  | Blue |  | Blue |
|  | EPG |  | Guide |
|  | [≡] |  | Text |
|  | [≡?] |  | Options |
|  | [...] |  | Subt |
|  | FAV/Home |  | Shift + Pre Ch |
|  | [≡+]/Search |  | 3D |
|  | [≡o]/Widget |  | Shift + Smart |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|----------|---|---------------|
|  | [≡◆]/Net |  | Shift + Media |
|  | Rec List |  | Shift + Info |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

