

 










 

 





 

 
 



 

 






 

 
 
 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Sleep		Sleep
	[i+]		Info
	Menu		Menu
	DTV Menu		Smart
	Mute		Mute
	▼/O)/II/I+II		Dual
	DTV		Media
	Recall		Pre Ch
	Source		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7


 
Originalfernbedienung Ersatzfernbedienung

	8		8
	9		9
	0		0
	Vol+		Vol +
	Vol-		Vol -
	P+		Ch +
	P-		Ch -
	Radio		TV/R
	PC		Shift + Media
	[> <]		Format
	End		Exit
	Return		Back
	[<>]		D. Menu
	OK		Ok
	Up		Up
	Down		Down
	Left		Left





Originalfernbedienung Ersatzfernbedienung

	Right		Right
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	EPG		Guide
	[...]		Subt
	[≡]		Text
	[≡?]		Options
	ESG		Shift + Smart
	[≡+]		Shift + Format
	[≡o]		Shift + Subt
	[≡◆]		3D
	AV Mode		Shift + AV

Originalfernbedienung Ersatzfernbedienung

