









 


 


 
 
 

 

 
 
 
 
 



 


 
 


 
 
 






 

 
 


 


 
 

 






**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK/Select		Ok
	M		Menu
	[ i ]/Info		Info
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9



 
 

 



 


 

**Originalfernbedienung    Ersatzfernbedienung**

	0		0
	Exit/-/--		Exit
	PP		Pre Ch
	Swap/P<P		Smart
	CH+		Ch +
	CH-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	I-II		Dual
	Tv/DTV		TV/R
	AV/Source		AV
	Red/↑		Red
	Green/↓		Green
	Yellow		Yellow
	Blue		Blue
	[≡]		Text





Originalfernbedienung Ersatzfernbedienung

	[≡+]/[X]		Format
	[≡x]/[■ ■]		Subt
	[≡o]		Options
	[≡◆]/[+]/Wide		3D
	[.≡]/[■]		Back
	[≡?]		Media
	Guide/[≡i]		Guide

Originalfernbedienung Ersatzfernbedienung