




 

 
 

 
 

 

 

 












Originalfernbedienung Ersatzfernbedienung

	On/Standby		Power
	Vol+		Vol +
	Vol-		Vol -
	1		1
	2		2
	3		3
	4		4
	5		5
	7		7
	6		6
	8		8
	9		9
	0		0
	+10		Guide
	CD		Red
	Tuner(Band)		Green
	Tape (1-2)		Yellow

Originalfernbedienung Ersatzfernbedienung

	Game/Video		Blue
	Memory		Rec
	Play CD		Play
	Stop CD		Stop
	Pause CD		Pause
	Random CD		Media
	Clear/Dimmer		Exit
	Play Tape		Smart
	Stop Tape		Shift + Stop
	Rec/Pause Tape		Shift + Pause
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	Display		Info
	Navigator		Menu





Originalfernbedienung Ersatzfernbedienung

CHARACTER	Character	RETURN BACK	Back
CLOCK /TIMER	Clock/Timer	TIMER AV	AV
SET	>> />>>/Up	+ CH	Ch +
PR	<</<</Down	- CH	Ch -
EQUALIZER MODE	Equalizer Mode	SOUND DUAL	Dual
X-BASS (SURROUND)	X-Bass/Surroun	AD SUBT	Subt
DISC SELECT ⊖1	Select Drive 1	SHIFT + 1	Shift + 1
⊖2	Select Drive 2	SHIFT + 2	Shift + 2
⊖3	Select Drive 3	SHIFT + 3	Shift + 3
⊖4	Select Drive 4	SHIFT + 4	Shift + 4
⊖5	Select Drive 5	SHIFT + 5	Shift + 5

Originalfernbedienung Ersatzfernbedienung

