

 

 













 





 



 

 

 





 



 






Originalfernbedienung	Ersatzfernbedienung
	 Power
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 AV / Input / RDS
	 0
	 Sleep / Timer
	 Setup / OPT /
	 Up
	 CH+ / Page+
	 Menu / Home

Originalfernbedienung	Ersatzfernbedienung
	 Left
	 OK
	 Right
	 Text / Goto
	 CH- / Page-
	 Down
	 Display / Media
	 Stop / Hold
	 Play / Slow
	 Rec / Rec Mode
	 I<< / Preset-
	 Pause / Step / Freeze
	 D.Menu / Top
	 >>I / Preset+
	 Audio / Lang I/II
	 Picture / Format
	 Back / Return





Originalfernbedienung Ersatzfernbedienung

	Angle		Info / Angle
	Tv/DVD		Smart / List
	Clear		Exit / Cancel / Clear
	Rec Mode	 + 	Shift + Rec / Rec Mode
	Subtitle		Subtitle / EQ

Originalfernbedienung Ersatzfernbedienung

