

 

 

 

 



 

 

 

 









 

 

 





Originalfernbedienung Ersatzfernbedienung

	Standby/On		Power
	Open/Close		Eject / Surround
	Source		AV / Input / RDS
	USB		Shift + 8
	DTV/Analog		Smart / List
	HDD		Shift + 7
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Tv/DVD		Display / Media
	0		0

Originalfernbedienung Ersatzfernbedienung

	Copy		Setup / OPT /
	I<<		I<< / Preset-
	Repeat		Shift + Green / APP /
	Pause		Pause / Step / Freeze
	>>I		>>I / Preset+
	<<		<< / Tune-
	Stop		Stop / Hold
	Play		Play / Slow
	>>		>> / Tune+
	Tv Vol+		Vol+
	Mute		Mute / Dimmer
	Prog+		CH+ / Page+
	Tv Vol-		Vol-
	Audio		Audio / Lang I/II
	Prog-		CH- / Page-
	Menu		Menu / Home
	Up		Up





Originalfernbedienung Ersatzfernbedienung

	Return		Back / Return
	Left		Left
	OK		OK
	Right		Right
	Info		Info / Angle
	Down		Down
	Exit		Exit / Cancel / Clear
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Title List/Disc Menu		D.Menu / Top
	Subtitle		Subtitle / EQ
	Marker		Fav / Marker / PC
	Play List/Title Menu		Shift + Menu /
	Text		Text / Goto
	Tv/Radio		TV/Radio /

Originalfernbedienung Ersatzfernbedienung

	FAV List		Shift + Fav / Marker / PC
	Timer		Sleep / Timer
	Rec		Rec / Rec Mode
	Guide		Guide / EPG / -/-
	Rec Mode		Shift + Rec / Rec Mode
	Rec Pause/Time Shift		Shift + Pause / Step /





Originalfernbedienung Ersatzfernbedienung

Standby/On		Power
Mute		Mute / Dimmer
Tv/DVD		TV/Radio /
Source		AV / Input / RDS
Tv Vol+		Vol+
Prog+		CH+ / Page+
Tv Vol-		Vol-
Prog-		CH- / Page-
1		1
2		2
3		3
4		4
5		5
6		6
7		7
8		8
9		9

Originalfernbedienung Ersatzfernbedienung

0		0

