 

 

 

 



 





 









 
 

 



 


 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Open/Close		Eject
	Mode/HDMI		Shift + AV
	Reso/Resolution		Shift + TV/R
	Home		Smart
	Pure/Pure Direct		Shift + Subt
	Mode/Sound		Sleep
	P/D/Prog Direct		Shift + Options
	ADJ./Pict.		Shift + Format
	CLR/Clear		Exit
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7

Originalfernbedienung Ersatzfernbedienung

	8		8
	9		9
	0		0
	+10		Guide
	Call		Pre Ch
	Input Up		Ch +
	Input Down		Ch -
	Power Amp		Shift + Power
	Mute		Mute
	Vol+		Vol +
	Vol-		Vol -
	Top Menu		Menu
	Pop Up Menu		Media
	Up		Up
	Left		Left
	Enter		Ok
	Right		Right





Originalfernbedienung Ersatzfernbedienung

	Down		Down
	Setup		Options
	Return		Back
	S/Search		AV
	Stop		Stop
	Pause		Pause
	Play		Play
	I<<		I<<
	>>I		>>I
	<<		<<
	>>		>>
	Camera/Angle		List
	[...]/Subtitle		Subt
	O)))/Audio		Dual
	Page		TV/R
	Mode		D. Menu
	Repeat All		Text

 

 

 

 
 



 





 









 
 

 



Originalfernbedienung Ersatzfernbedienung

	Repeat A-B		Shift + Text
	Random		Format
	Disp/Display		Info
	Dimm./Dimmer		3D
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue

 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Open/Close		Eject
	Mode/HDMI		Shift + AV
	Reso/Resolution		Shift + TV/R
	Home		Smart
	Pure/Pure Direct		Shift + Subt
	Mode/Sound		Sleep
	P/D/Prog Direct		Shift + Options
	ADJ./Pict.		Shift + Format
	CLR/Clear		Exit
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7


 
 


 




 
 
Originalfernbedienung Ersatzfernbedienung

	8		8
	9		9
	0		0
	+10		Guide
	Call		Pre Ch
	Input Up		Ch +
	Input Down		Ch -
	Power Amp		Shift + Power
	Mute		Mute
	Vol+		Vol +
	Vol-		Vol -
	Top Menu		Menu
	Pop-Up Menu		Media
	Up		Up
	Left		Left
	Enter		Ok
	Right		Right

 


 

 
 


 
 









Originalfernbedienung Ersatzfernbedienung

	Down		Down
	Setup		Options
	Return		Back
	S/Search		AV
	Stop		Stop
	Pause		Pause
	Play		Play
	I<<		I<<
	>>I		>>I
	<<		<<
	>>		>>
	Camera/Angle		List
	[...]/Subtitle		Subt
	O)))/Audio		Dual
	Page		TV/R
	Mode		D. Menu
	Repeat All		Text

Originalfernbedienung Ersatzfernbedienung

	Repeat A-B		Shift + Text
	Random		Format
	Disp/Display		Info
	Dimm./Dimmer		3D
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue

