




Originalfernbedienung Ersatzfernbedienung

	Standby/On		Power
	Open/Close		Eject
	Audio/O))		Dual
	Subtitle/[...]		Subt
	Angle/Camera		Options
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Clear		Exit
	Enter		Ok

Originalfernbedienung Ersatzfernbedienung

	Top Menu		Shift + Menu
	Menu		Menu
	Return		Back
	Setup		Text
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Play		Play
	Enter		Shift + Ok
	<</</<<<<		<<
	>/>/>>>>		>>
	<<		<<
	Pause		Pause
	Stop		Stop
	>>		>>
	Play Mode		TV/R





Originalfernbedienung Ersatzfernbedienung

SURROUND	Surround	SHIFT + SOUND DUAL	Shift + Dual
ZOOM	Zoom	SHIFT + ZOOM	Shift + Eject
DISPLAY	Display	DISPLAY INFO	Info

Originalfernbedienung Ersatzfernbedienung

