


 




 


 
 




 

 




 




 

 


 






 






Originalfernbedienung Ersatzfernbedienung

	Power Tv		Power
	Input 1	 + 	Shift + 1
	Input 2	 + 	Shift + 2
	Input 3	 + 	Shift + 3
	Input 4	 + 	Shift + 4
	Input 5	 + 	Shift + 5
	Input 6	 + 	Shift + 6
	Input 7	 + 	Shift + 7
	Input 8	 + 	Shift + 8
	TV		TV/Radio /
	DTV		D.Menu / Top
	Radio	 + 	Shift + TV/Radio / Program
	[≡o]		Sleep / Timer
	[...]		Subtitle / EQ
	[≡?]	 + 	Shift + AV / Input / RDS
	[≡+]	 + 	Shift + Stop /
	[≡]		Text / Goto

Originalfernbedienung Ersatzfernbedienung

	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	[i+]/Info	 + 	Shift + Info / Angle
	0		0
	P.Info		Info / Angle
	P+		CH+ / Page+
	CH.Return	 + 	Shift + Back / Return
	Vol+		Vol+
	P-		CH- / Page-
	Mute		Mute / Dimmer

 

 

 

 

 



 

 

 



 





Originalfernbedienung Ersatzfernbedienung

	Vol-		Vol-
	X/Exit		Exit / Cancel / Clear
	EPG/DVD Top Menu/Guide		Guide / EPG / /--
	Down		Down
	Left		Left
	Enter		OK
	Right		Right
	Menu/Home		Menu / Home
	Up		Up
	Return		Back / Return
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	I<<		I<< / Preset-
	Blue		Blue / Prime Video / Random
	>>I		>>I / Preset+
	Pause/Standby		Pause / Step / Freeze

Originalfernbedienung Ersatzfernbedienung

	<<		<< / Tune-
	Play		Play / Slow
	>>		>> / Tune+
	CTRL/HDMI		Display / Media
	Rec		Rec / Rec Mode
	Rec Stop		Shift + Rec / Rec Mode
	Stop		Stop / Hold
	·->/CM Skip		Shift + >> /
	Tools/I-II		Setup / OPT /
	DVD/Screen		Zoom / Size
	HDD/AV Selection		AV / Input / RDS

