








 




 

 

 
 

 
 
 


 





 







 















 

 








Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	Vol+		Vol +
	Vol-		Vol -
	Folder Up		Up
	Folder Down		Down
	Input		AV
	Optical		Options
	Woofer Level		Menu
	Sound Effect		Dual
	Info		Info
	Sleep		Sleep
	Stop		Stop
	Play		Play
	>>I		>>I
	Pause		Pause
	I<<		I<<

Originalfernbedienung Ersatzfernbedienung

	Repeat		Text
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Power Tv		Shift + Power
	AV/INPUT Tv		Media
	Vol- Tv		Shift + Vol -
	Vol+ Tv		Shift + Vol +
	PR/CH+ Tv		Ch +
	PR/CH- Tv		Ch -



