
 



 


 

 


 



Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|------------|---|-------------------------------|
|  | Power |  | Power |
|  | Mute |  | Mute / Dimmer |
|  | Red |  | Red / Netflix / Search |
|  | Green |  | Green / APP / Repeat |
|  | Yellow |  | Yellow / YouTube / Repeat |
|  | Blue |  | Blue / Prime Video / Random |
|  | <</[Timer] |  | << / Tune- |
|  | >>/[≡?] |  | >> / Tune+ |
|  | I<</[≡↓] |  | I<< / Preset- |
|  | >>I/[≡...] |  | >>I / Preset+ |
|  | Play |  | Play / Slow |
|  | Pause |  | Pause / Step / Freeze |
|  | Stop |  | Stop / Hold |
|  | [≡i] |  | Shift + Info / Angle |
|  | Text |  | Text / Goto |
|  | Subtitle |  | Subtitle / EQ |
|  | Freeze |  | Shift + Pause / Step / Freeze |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-----------|---|---------------------------|
|  | Info |  | Info / Angle |
|  | [[]] |  | Shift + Audio / Lang I/II |
|  | Source/Av |  | AV / Input / RDS |
|  | Up |  | Up |
|  | Left |  | Left |
|  | Ok |  | OK |
|  | Right |  | Right |
|  | Down |  | Down |
|  | Epg |  | Guide / EPG / -/- |
|  | Exit |  | Exit / Cancel / Clear |
|  | Vol+ |  | Vol+ |
|  | Fav |  | Fav / Marker / PC |
|  | Ch+ |  | CH+ / Page+ |
|  | Vol- |  | Vol- |
|  | Rec |  | Rec / Rec Mode |
|  | Ch- |  | CH- / Page- |
|  | 1 |  | 1 |





Originalfernbedienung Ersatzfernbedienung

| | | | |
|--------|--------|-----------------|-------------------|
| 2 | 2 | DVD 2 | 2 |
| 3 | 3 | CD - STB 3 | 3 |
| 4 | 4 | VIDEO 4 | 4 |
| 5 | 5 | TAPE 5 | 5 |
| 6 | 6 | TUNER 6 | 6 |
| 7 | 7 | AUX - HDD 7 | 7 |
| 8 | 8 | USB 8 | 8 |
| 9 | 9 | BLUETOOTH 9 | 9 |
| AUDIO | Audio | LANG I/II AUDIO | Audio / Lang I/II |
| 0 | 0 | HDMI - BAT 0 | 0 |
| RECALL | Recall | RETURN BACK | Back / Return |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|--|--|--|
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

