




 










**Originalfernbedienung    Ersatzfernbedienung**

	Standby		Power
	DTV/VCR		AV / Input / RDS
	Mute		Mute / Dimmer
	Info		Info / Angle
	Pause		Pause / Step / Freeze
	Menu		Menu / Home
	EPG		Guide / EPG / -/--
	Exit		Exit / Cancel / Clear
	Up		Up
	CH+		CH+ / Page+
	Left		Left
	Vol-		Vol-
	OK		OK
	Vol+		Vol+
	Right		Right
	CH-		CH- / Page-
	Down		Down

**Originalfernbedienung    Ersatzfernbedienung**

	Favorite		Fav / Marker / PC
	1		1
	2		2
	3		3
	Game		Smart / List
	4		4
	5		5
	6		6
	Recall		Back / Return
	7		7
	8		8
	9		9
	0		0
	Tv/Radio		TV/Radio /
	Audio		Audio / Lang I/II
	Subtitle		Subtitle / EQ
	Text		Text / Goto





Originalfernbedienung Ersatzfernbedienung

[Red]	Red	[Netflix]	Red / Netflix / Search
[Green]	Green	[App]	Green / APP / Repeat
[Yellow]	Yellow	[YouTube]	Yellow / YouTube / Repeat
[Blue]	Blue	[Prime Video]	Blue / Prime Video / Random

Originalfernbedienung Ersatzfernbedienung