



**Originalfernbedienung Ersatzfernbedienung**

|  |            |  |               |
|--|------------|--|---------------|
|  | Power      |  | Power         |
|  | Tv/AV      |  | AV            |
|  | 1          |  | 1             |
|  | 2          |  | 2             |
|  | 3          |  | 3             |
|  | 4          |  | 4             |
|  | 5          |  | 5             |
|  | 6          |  | 6             |
|  | 7          |  | 7             |
|  | 8          |  | 8             |
|  | 9          |  | 9             |
|  | 0          |  | 0             |
|  | -/--       |  | Shift + Guide |
|  | Eject      |  | Eject         |
|  | Play/Pause |  | Play          |
|  | Stop       |  | Stop          |
|  | Return     |  | Back          |

**Originalfernbedienung Ersatzfernbedienung**

|  |           |  |              |
|--|-----------|--|--------------|
|  | Mute      |  | Mute         |
|  | Vol+      |  | Vol +        |
|  | Vol-      |  | Vol -        |
|  | Up        |  | Up           |
|  | CH+       |  | Ch +         |
|  | CH-       |  | Ch -         |
|  | Down      |  | Down         |
|  | Right     |  | Right        |
|  | Left      |  | Left         |
|  | Sys Menu  |  | Menu         |
|  | Display   |  | Shift + Info |
|  | OK        |  | Ok           |
|  | Picture   |  | Format       |
|  | Sound     |  | Dual         |
|  | Timer     |  | Shift + AV   |
|  | Nicam/A2  |  | Media        |
|  | Lan/Prog- |  | Shift + Ch - |





**Originalfernbedienung Ersatzfernbedienung**

|  |                       |   |              |
|--|-----------------------|---|--------------|
|  | Zoom/Prog+            | + | Shift + Ch + |
|  | Sub                   |   | Subt         |
|  | Goto                  |   | Options      |
|  | SET/Tv/TXT/DVB-       |   | Text         |
|  | ANG/Reveal/Exit       |   | Exit         |
|  | Menu/Cancel/Tv Format |   | D. Menu      |
|  | Title/info            |   | Info         |
|  | <</Hold/Languag       |   | <<           |
|  | >>/Size/Text          |   | >>           |
|  | I<</Subpage           |   | I<<          |
|  | FAV                   |   | Pre Ch       |
|  | >>I/Index             |   | >>I          |
|  | EPG                   |   | Guide        |
|  | Red/Pro               |   | Red          |
|  | Tv/Radio              |   | TV/R         |
|  | Green/Slow/Audio      |   | Green        |
|  | Yellow/Rep/Freeze     |   | Yellow       |

**Originalfernbedienung Ersatzfernbedienung**

|  |                   |  |      |
|--|-------------------|--|------|
|  | Blue/A-B/Subtitle |  | Blue |
|  |                   |  |      |
|  |                   |  |      |
|  |                   |  |      |
|  |                   |  |      |
|  |                   |  |      |
|  |                   |  |      |
|  |                   |  |      |
|  |                   |  |      |
|  |                   |  |      |
|  |                   |  |      |
|  |                   |  |      |
|  |                   |  |      |
|  |                   |  |      |
|  |                   |  |      |
|  |                   |  |      |

