
 












Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	/--		Shift + Guide / EPG / --
	Recall		Back / Return
	Vol+		Vol+
	I/II/Audio		Audio / Lang I/II
	Auto		Smart / List

Originalfernbedienung Ersatzfernbedienung

	CH+		CH+ / Page+
	Vol-		Vol-
	Display		Display / Media
	CH-		CH- / Page-
	Up		Up
	Left		Left
	OK/Enter		OK
	Right		Right
	Menu		Menu / Home
	Down		Down
	Exit		Exit / Cancel / Clear
	Source		AV / Input / RDS
	P.Mode		Picture / Format
	S.Mode		Sound / Title
	Sleep		Sleep / Timer
	Play/Pause / Size		Zoom / Size
	Play/Pause / Size		Play / Slow





Originalfernbedienung Ersatzfernbedienung

SIZE 	Play/Pause / Size	STEP-FREEZE 	Pause / Step / Freeze
HOLD 	Stop/Hold	HOLD 	Stop / Hold
TEXT 	Text	GOTO TEXT 	Text / Goto
SUBTITLE 	Subtitle	EQ SUBTITLE 	Subtitle / EQ
INDEX 	<</Index	TUNE- 	<< / Tune-
REVEAL 	>>/Reveal	TUNE+ 	>> / Tune+
SUBPAGE 	I<</Subpage	PRESET- 	I<< / Preset-
FAV 	>>I/FAV	PRESET+ 	>>I / Preset+
FAV 	>>I/FAV	PC FAV MARKER 	Fav / Marker / PC
MEDIA 	Media	SHIFT + MEDIA DISPLAY 	Shift + Display / Media
REC 	Rec	REC MODE 	Rec / Rec Mode
EPG 	EPG	-/-- GUIDE EPG 	Guide / EPG / -/--
TVRADIO 	Tv/Radio	PROGRAM TV/ RADIO 	TV/Radio /
	Red	NETFLIX SEARCH 	Red / Netflix / Search
	Green	APP REPEAT 	Green / APP / Repeat
	Yellow	YouTube REPEAT A-B 	Yellow / YouTube / Repeat
	Blue	Prime Video RANDOM 	Blue / Prime Video / Random

Originalfernbedienung Ersatzfernbedienung

