


 

 
 
 

 

 
 
 
 
 
 
 

 
 
 
 
 

 
 


 
 

 

 
 


 

 

 

 




 
 
 
 
 


 









Originalfernbedienung Ersatzfernbedienung



 
 
 












 


 





 
 
| | | | |
|-------------------------------------------------------------------------------------|------------|-------------------------------------------------------------------------------------|--------------|
|  | Power |  | Power |
|  | Tv/Rad. |  | TV/R |
|  | Subtitle |  | Subt |
|  | AD |  | Shift + Subt |
|  | [↔]/Ratio |  | 3D |
|  | Ext(Cable) |  | AV |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | List |  | List |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---------------------------------------------------------------------------------------|--------|---------------------------------------------------------------------------------------|---------|
|  | Q.View |  | Media |
|  | FAV |  | Pre Ch |
|  | Guide |  | Guide |
|  | Mute |  | Mute |
|  | Vol+ |  | Vol + |
|  | Vol- |  | Vol - |
|  | PR+ |  | Ch + |
|  | PR- |  | Ch - |
|  | Text |  | Text |
|  | Home |  | Smart |
|  | * |  | Menu |
|  | T.Opt. |  | Options |
|  | Q.Menu |  | D. Menu |
|  | Up |  | Up |
|  | Down |  | Down |
|  | Right |  | Right |
|  | Left |  | Left |





| Originalfernbedienung | | Ersatzfernbedienung | | Originalfernbedienung | | Ersatzfernbedienung | |
|-------------------------------------------------------------------------------------|--------|-------------------------------------------------------------------------------------|--------|-----------------------|--|---------------------|--|
|  | OK |  | Ok | | | | |
|  | Back |  | Back | | | | |
|  | Exit |  | Exit | | | | |
|  | Info |  | Info | | | | |
|  | Rec/* |  | Rec | | | | |
|  | Stop |  | Stop | | | | |
|  | << |  | << | | | | |
|  | Play |  | Play | | | | |
|  | Pause |  | Pause | | | | |
|  | >> |  | >> | | | | |
|  | Red |  | Red | | | | |
|  | Green |  | Green | | | | |
|  | Yellow |  | Yellow | | | | |
|  | Blue |  | Blue | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |

